

# Installation Manual

## 105U-L Wireless I/O



Version 1.9

man\_105U-L\_installation\_v1.9.doc



## Document information

Installation Manual 105U-L Wireless I/O Version 1.9

## ELPRO contact details

Address > 9 /12 Billabong Street Stafford, QLD 4053  
Telephone > + 61 (0)7 3352 8600  
Fax > + 61 (0)7 3352 8677  
Email > [sales@elprotech.com](mailto:sales@elprotech.com)  
Website > [www.elprotech.com](http://www.elprotech.com)

## Copyright

Copyright © 2007 ELPRO Technologies Pty Ltd. All rights reserved.

## Limited lifetime warranty, disclaimer and limitation of remedies

ELPRO products are warranted to be free from manufacturing defects for the “serviceable lifetime” of the product. The “serviceable lifetime” is limited to the availability of electronic components. If the serviceable life is reached in less than three years following the original purchase from ELPRO, ELPRO will replace the product with an equivalent product if an equivalent product is available.

This warranty does not extend to:

- Failures caused by the operation of the equipment outside the particular product's specification, or
- Use of the module not in accordance with this User Manual, or
- Abuse, misuse, neglect or damage by external causes, or
- Repairs, alterations, or modifications undertaken other than by an authorized Service Agent.

ELPRO's liability under this warranty is limited to the replacement or repair of the product.

This warranty is in lieu of and exclusive of all other warranties. This warranty does not indemnify the purchaser of products for any consequential claim for damages or loss of operations or profits and ELPRO is not liable for any consequential damages or loss of operations or profits resulting from the use of these products. ELPRO is not liable for damages, losses, costs, injury or harm incurred as a consequence of any representations, warranties or conditions made by ELPRO or its representatives or by any other party, except as expressed solely in this document.



---

# Contents

---

<b>Contents</b>	<b>3</b>
Safety information .....	4
Hazardous Location Notices: .....	4
About this document .....	4
<b>Installing your unit</b>	<b>5</b>
Unit components and connections .....	6
Transmitter unit.....	6
Receiver unit.....	9
Installing the antenna .....	11
Supported antennas .....	11
Radio transmission distances .....	13
Installing and earthing antennas .....	14
Dipole and collinear antennas .....	15
Dipole antennas .....	15
Collinear antennas .....	15
Yagi antennas.....	17
Installing the power supply .....	19
<b>Inputs and outputs</b>	<b>20</b>
Digital inputs .....	21
Relay outputs.....	22
Status outputs.....	23
Analog input.....	24
Thermocouple input.....	27
Pulse input.....	28
Analog output .....	29
<b>Installing and configuring the unit</b>	<b>31</b>
Installing the unit .....	32
Configuring your units .....	33
Testing your units .....	34
<b>Unit specifications</b>	<b>35</b>
Transmitter unit .....	35
Receiver unit .....	35
Ancillary hardware reference information .....	36
RS232 serial cable .....	36
<b>Index</b>	<b>37</b>



## Safety information

Thank you for selecting the 105U-L for your telemetry needs. We trust it will give you many years of valuable service. To ensure your 105U-L enjoys a long life, double-check **ALL** your connections with the **Installation Guide** before powering on the module.

**WARNING:** Incorrect termination of supply wires may cause internal damage and will void warranty.

### **\*\*IMPORTANT ELECTRICAL SAFETY INFORMATION\*\***

In order to comply with Electrical Safety Regulations, this module must be installed in an Electrical AND Fire enclosure. This enclosure may be a single or multiple enclosures. Access to the module is to be made by a Service Person only.

## Hazardous Location Notices:



This device complies with

Ex nA IIC T6 Gc -40C <= Ta <= + 60C

WARNING: EXPLOSION HAZARD.

Do not disconnect equipment unless power has been switched off or the area is known to be non-hazardous

## About this document

This document is the **105U-L Wireless I/O Installation Manual** that describes how to install your 105U-L units and contains important information for installing your units with other equipment.

### Note

If your network only contains one transmitter and receiver pair, you should also read the 105U-L QuickStart Guides.

This document contains the following sections:

Section	Read this section if you want to ...
<b>Basic steps for using your unit</b>	Learn the basic steps for installing and using your unit.
<b>Factory default configuration</b>	Understand how the transmitter sends information to the receiver.
<b>Unit components</b>	Understand the different parts of your unit.
<b>Antenna installation</b>	Learn how to install an antenna with your unit.
<b>Resetting factory defaults</b>	Reset your unit to the original factory default settings.
<b>Linking transmitter and receiver units</b>	Link your units to work as a dedicated pair.
<b>Safety information</b>	Understand important safety information related to your unit. <b>NOTE:</b> You must read this information before installing your unit.
<b>Specifications</b>	Know technical information about your unit.

For more information, see the next sections.



---

## Installing your unit

---

This section describes how to install your unit and contains the following sections:

Step	Description	For more information, see ...
<b>1 – Read the safety information</b>	Lets you understand important safety information related to your unit. <b>NOTE:</b> You must read this information before installing your unit.	Safety Information on page 5.
<b>2 – Get to know the unit features</b>	Understand the basic features of your unit.	Unit components and connections on page 6.
<b>3 – Install the antenna</b>	Learn how to install an antenna with your unit.	Installing the antenna on page 11.
<b>4 – Install the power supply</b>	Learn how to install a power supply for your unit.	Installing the power supply on page 19.
<b>5 – Install the units</b>	Learn how to install your unit.	Installing the unit on page 32.
<b>6 – Linking and configuring the unit</b>	Learn how to link and configure your units to transmit and receive information.	Configuring your units on page 33.
<b>7 – Test the unit</b>	Understand the principles for testing your units.	Testing your units on page 34.

### Note

To ensure internal surge protection works correctly, you must earth each unit using the Earth terminal.

---

For more information, see the next sections.




## Unit components and connections

This section shows the components and terminal connections for the transmitter and receiver units.


### Transmitter unit

The 105U-L-T transmitter unit has the following components and terminal connections:

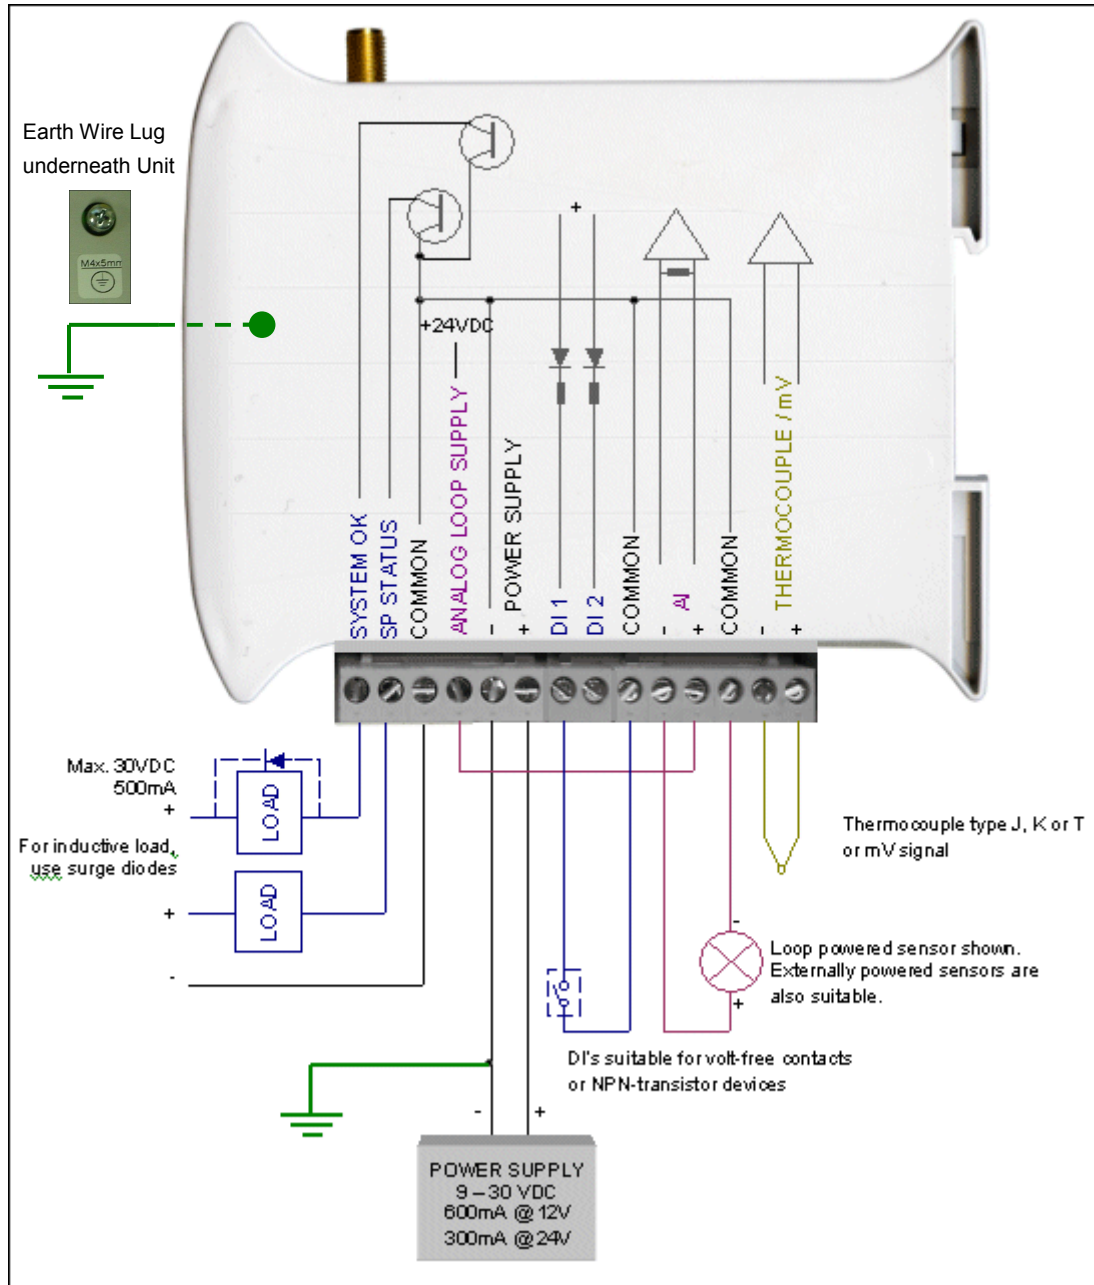




The front panel contains the following components:

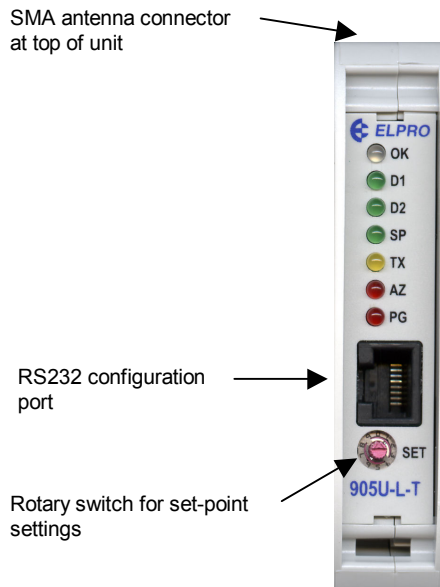

The triangle on the rotary switch indicates the current position, for example:

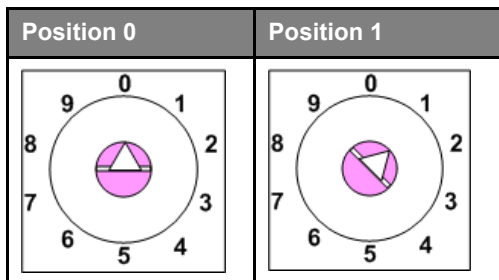

**NOTE:** To avoid damaging the rotary switch, use a screwdriver to change the position. The rotary switch controls the setpoint levels on the Analog and Thermocouple inputs.



The LEDs on the front panel indicate the unit status:


LED Status	Indicates	
<b>None</b>	No power supply.	
<b>OK LED Green</b>	Current status of the unit OK.	
<b>OK LED Red</b>	Fault condition detected in unit.	
<b>TX Led Flashes</b>	Transmitting Message.	
<b>PG LED on</b>	Configuration Cable Connected.	
<b>Input LED ON</b>	Input LEDs (i.e. D1, D2, SP, AZ.) light when the corresponding input is active.	
	D1	Digital Input 1 is active (Low).
	D2	Digital Input 2 is active.
	SP	Analog Setpoint is active.
	AZ	Analog Input is zero mA
<b>All LEDs medium flash</b>	Medium speed flash (1.6HZ) indicates the module is halfway through the configuration process. Medium flash also happens when you set the rotary switch to position 0 when powering on the unit.	






## Receiver unit

Your 105U-L-R unit has the following components and terminal connections:

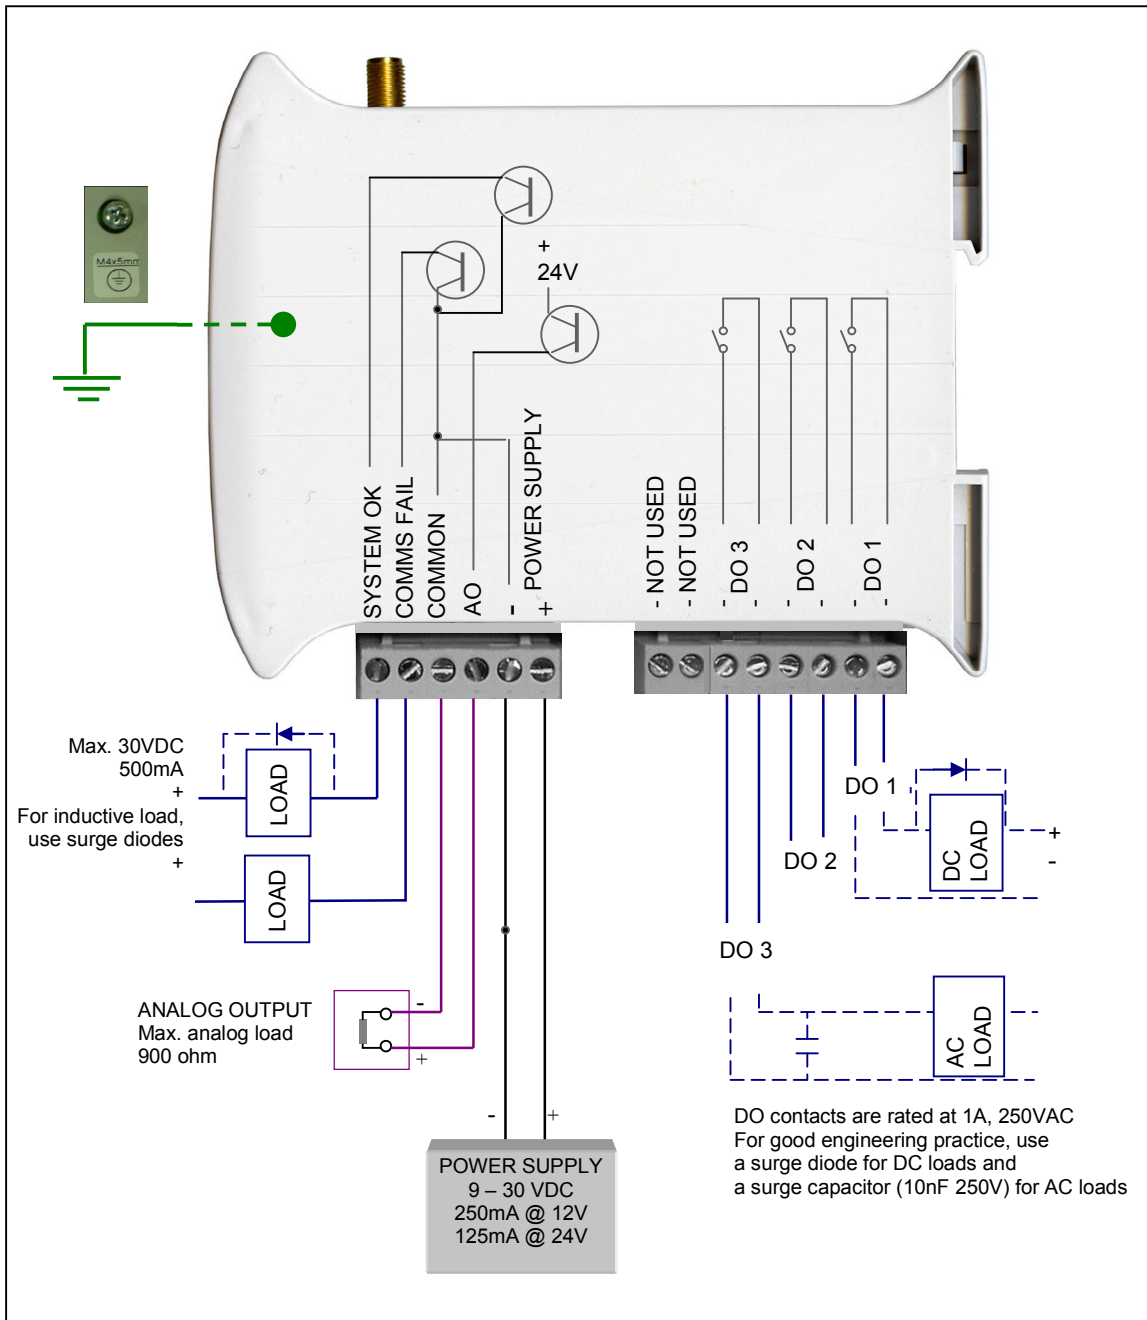



The front panel contains the following components:

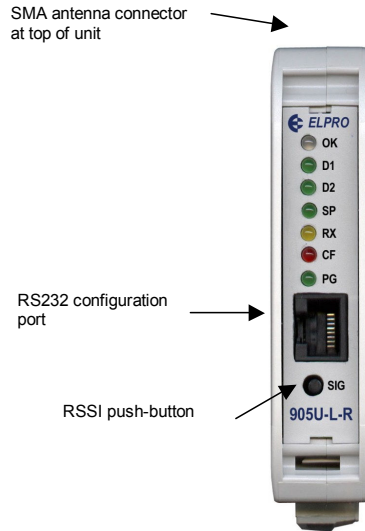

The LEDs on the front panel indicate the unit status:

LED Status	Indicates			
<b>None</b>	No power supply.			
<b>OK LED Green</b>	Current status of the unit OK.			
<b>OK LED Red</b>	Fault condition detected in unit.			
<b>RX Led Flashes</b>	Receiving Message.			
<b>CF Led ON</b>	Module Communication Failure Output is active.			
<b>PG LED on</b>	Configuration Cable Connected.			
<b>Output LED ON</b>	The Output LEDs (i.e. D1, D2, D3) light when the corresponding output is active.			
	D1	Relay output D1 is ON (Contact Closed).		
	D2	Relay Output D2 is ON.		
	D3	Relay Output D3 is ON.		
<b>LEDs with RSSI Push Button Pressed</b>	When you press the RSSI push button, the unit shows the signal strength by lighting the LEDs from the bottom to the top. Signal strength is the strength of the last message received that was addressed to this station.			
	LED	Signal Strength	LED	Signal Strength
	D1	More than -85 dBm	RX	More than -100 dBm
	D2	More than -90 dBm	CF	More than -105 dBm
	D3	More than -95 dBm	PG	Always on during RSSI test
<b>Output LED flashing quickly</b>	If an output is in communication failure, the corresponding LED flashes at 5 Hz.			
	D1	Relay Output D1 is in communication failure.		
	D2	Relay Output D2 is in communication failure.		
	D3	Relay Output D3 is in communication failure.		
	PG	Analog output is in communications failure.		



## Installing the antenna

This section explains how to install your antenna and contains the following sections:

Section	Description	For more information, see ...
<b>Supported antennas and cables</b>	Details the antennas and cables you can use with the units.	Supported antennas on page 11.
<b>Radio transmission distances</b>	Details the distances for reliable operation.	Radio transmission distances on page 13.
<b>Installing and earthing antennas</b>	Details important information about installing and earthing antennas.	Installing and earthing antennas on page 14
<b>Dipole and collinear antennas</b>	Details important information about using dipole and collinear antennas.	Dipole and collinear antennas on page 15.
<b>Yagi antennas</b>	Details important information about using Yagi antennas.	Yagi antennas on page 17.

For more information, see the next sections.

### *Supported antennas*

You can use the following antennas with the units:

Antenna	Additional information	Total gain (including cable)
<b>WH900</b>	Whip antenna for mounting directly onto the module - operation up to ½ mile (1 km).	-6 dBi
<b>CFD890EL</b>	0 dBi Dipole antenna with 15' of Cellfoil cable and SMA connector.	0 dBi
<b>SG900EL</b>	5dBi Collinear omni-directional antenna with N-type connector.	5 dBi
<b>SG900-6</b>	8dBi Collinear omni-directional antenna with N-type connector.	8 dBi
<b>YU6/900</b>	10dBi Yagi directional antenna with N-type connector.	10 dBi
<b>YU16/900</b>	15dBi Yagi directional antenna with N-type connector.	15 dBi

You can use the following cables with the units:

The following table shows compatible cables for different antennas when used with the 105U-L-T:

Antenna	North America	Australia/NZ
<b>SG900EL</b>	Any cable.	CC10 or CC20.
<b>SG900-6</b>	Any cable.	CC20.
<b>YU6/900</b>	CC20.	External cable with loss > 9dB.
<b>YU16/900</b>	External cable with loss > 9dB.	External cable with loss > 15 dB



You must carefully select antennas for 105U-L-T modules to avoid contravening the maximum power limit on the unlicensed channel. The net gain of the antenna/cable configuration should be no more than 6dB in North America (USA, Canada, Mexico) and no more than 0 dB in Australia / New Zealand.

**Note**

The net gain of an antenna/cable configuration is the gain of the antenna (in dBi) less the loss in the coaxial cable (in dB).

For example, an SG900-6 antenna with a CC20/900 cable has a net gain of 2dB (i.e. +8 dB – 6 dB) at 900 MHz.

The 105U-L-R module has no limitation on antenna gain, as this module does not incorporate a radio transmitter.

The following table details the gains of some typical antennas:

Antenna	Gain (dBi)
Dipole with integral 3m cable	0
Dipole without cable	2
5dBi Collinear (3dBd)	5
8dBi Collinear (6dBd)	8
3 element Yagi	5
6 element Yagi	10

The following table details losses for typical cables:

Cable	Loss (dB per 10m) at 900 MHz
RG58	-5
RG213	-2.5
Cellfoil	-3



## Radio transmission distances

The unit will operate reliably over large distances depending on the:

- **Antenna type;**
- **Antenna location;**
- **Amount of radio interference;** and
- **Radio path obstructions** (e.g. hills or trees).

Typical reliable distances are:

Area	Distance	Additional information
<b>USA/Canada</b>	20+ miles	6dB net gain antenna configuration permitted (4W Equivalent RF power permitted).
<b>Australia/NZ</b>	20+ km	Unity gain antenna configuration (1W Equivalent RF power permitted).

To achieve these distance, you must elevate at least one site on a hill or transmission tower.

Modules will operate reliably with some radio path obstruction; however obstructions also reduce the reliable distance.

### Note

You must test all obstructed paths to check the reliability of the path.

You can achieve maximum transmission distances if the radio path has “line of sight”. For example, raising antennas above intermediate obstructions including hills, trees, etc. Obstructions reduce the range; however they may not prevent a reliable path.

The closer the obstruction is to the antenna, the greater the blocking effect. For example, a group of trees around the antenna is a larger obstruction than a group of trees further away from the antenna. You can achieve longer distances by mounting one antenna on top of a hill.

### Note

Due to the earth’s curvature, you must elevate antennas higher than the ground level between the antennas for longer paths (greater than 3 miles / 5 km).

The unit can tolerate larger amounts of obstructions for shorter distances. For very short distances, you can also mount the antennas inside buildings.

If two 105 modules cannot communicate reliably, you can use a third 105 module as a “repeater” to receive and re-transmit messages. This module may also have input/output (I/O) signals connected to it and form part of the I/O network.

### Note

1. ELPRO recommends using the 105-G module as a repeater unit between 105U-L-T and 105U-L-R modules.

2. To use a repeater unit, the 105U-L modules and the repeater module must be configured using the supplied configuration software. The factory default configuration described in the Quick Start Guide cannot use a repeater unit.



## Installing and earthing antennas

You must connect an antenna to each 105 module using the SMA connector at the top of the enclosure.

ELPRO recommends carefully taping the connections between the antenna and coaxial cable to prevent moisture ingress. Moisture ingress in the coaxial cable is a common cause of radio system problem as it greatly increases the radio losses.

ELPRO recommends taping the connection with three layers of tape:

Layer	Tape
1	PVC tape.
2	Vulcanising tape (e.g. 3M 23 tape).
3	Additional layer of PVC UV-stabilized insulating tape.

The first tape layer lets you easily inspect the joint if required as you can easily remove the vulcanising seal.

### Note

You must effectively earth all masts for mast-mounted antennas to avoid lightning surges. We also recommend using a coaxial surge diverter for antennas mounted outside industrial plant environments.

If the antenna is not already shielded from lightning strike by an adjacent earthed structure, you can provide shielding by installing a lightning rod above the antenna.

You should connect the antenna to the module using 50 ohm coaxial cable (e.g. RG58 or RG213) terminated with a male coaxial connector. The higher the antenna is mounted, the greater the transmission range; however as the length of coaxial cable increases so do cable losses. For use on unlicensed frequency channels, there are several types of antenna suitable for use.

If you mount antennas on elevated masts, you should effectively earth the masts to avoid lightning surges. The 105U-L radios are fitted with surge protection.

### Note

For high lightning risk areas, ELPRO recommends additional surge suppression devices. If the antenna is not already shielded from lightning strike by an adjacent earthed structure, you can install a lightning rod to provide shielding.



## *Dipole and collinear antennas*

This section contains important information for using dipole and collinear antennas. For more information, see the next sections.

### Dipole antennas

Unity gain dipole antennas are commonly used on unlicensed channels. The dipole antenna does not provide any gain, so the power transmitted from the antenna is the same as the power out of the module.

A dipole antenna that comes supplied with integral 15 ft cable does not require additional coaxial cable.

You should mount dipole antennas vertically, preferably no less than 1 metre away from a wall or mast for maximum performance.

### Collinear antennas

Collinear antennas transmit the same amount of radio power in all directions horizontally, and are easy to install and use. They provide gain by compressing the radiated signal to a flattened disc shape, and reducing the amount of signal radiated above and below the horizontal plane.

Collinear antennas are generally used at a central site with more than one remote site, or at a repeater site.

Collinear antennas are similar in appearance to dipole antennas; however the antenna is longer.


Collinear antennas are supplied without cable, and require additional coaxial cable.

You can use collinear antennas to:

- **Transmitter** – to compensate for the losses in long lengths of coaxial cable.
- **Receiver** – to increase receive sensitivity.



The following diagrams shows the recommended installation for collinear and dipole antennas:

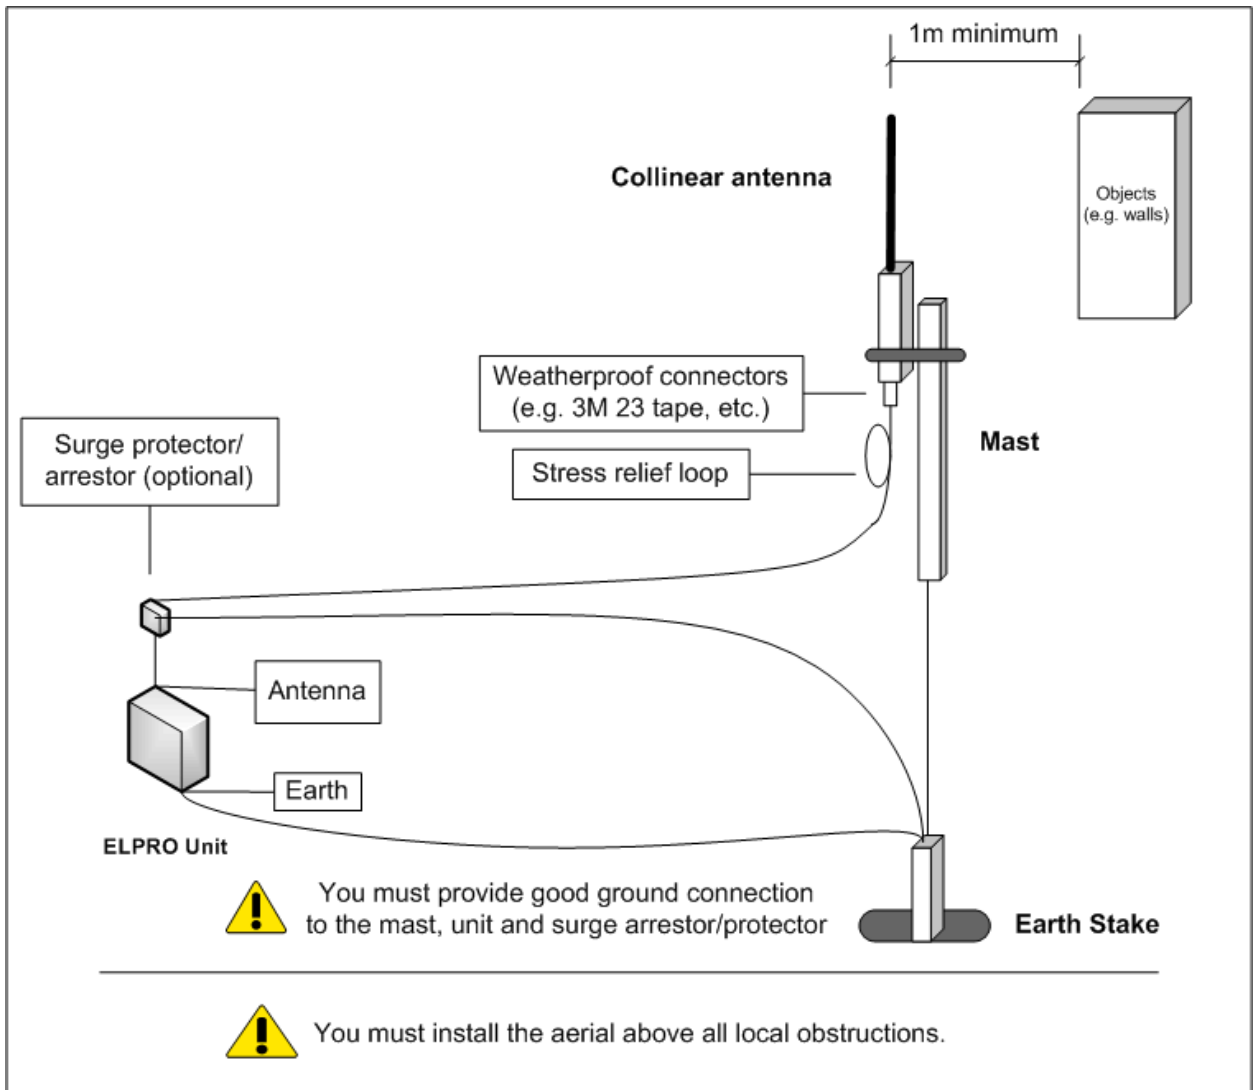





## Yagi antennas

Yagi antennas are directional and have positive gain to the front of the antenna and negative gain in other directions. You can use the gain to:

- **Compensate for coaxial cable loss for transmitter unit;** and
- **Increase receive sensitivity for receiver units.**

You should install Yagi antennas with the central beam horizontal and pointed directly in the transmission direction to benefit from the antenna gain.

### Note

Yagi antennas usually have a drain hole on the folded element. You should position the drain hole at the bottom when installing the antenna.

You can install Yagi antennas:


- **Vertically polarized** – with the elements in a vertical plane; or
- **Horizontally polarized** – with the elements in a horizontal plane.

The following table shows the recommended installation mode for different situations.

If your installation has ...	ELPRO recommends using ...
<b>Two stations both using Yagi antennas</b>	<ul style="list-style-type: none"><li>• Horizontal polarization for the stations.</li></ul>
<b>Two or more stations communicating with a common station</b>	<ul style="list-style-type: none"><li>• Vertical polarization for the stations; and</li><li>• Dipole or collinear (i.e. non-directional) antenna for the central station.</li></ul>



The following diagrams shows the recommended installation for collinear and dipole antennas:

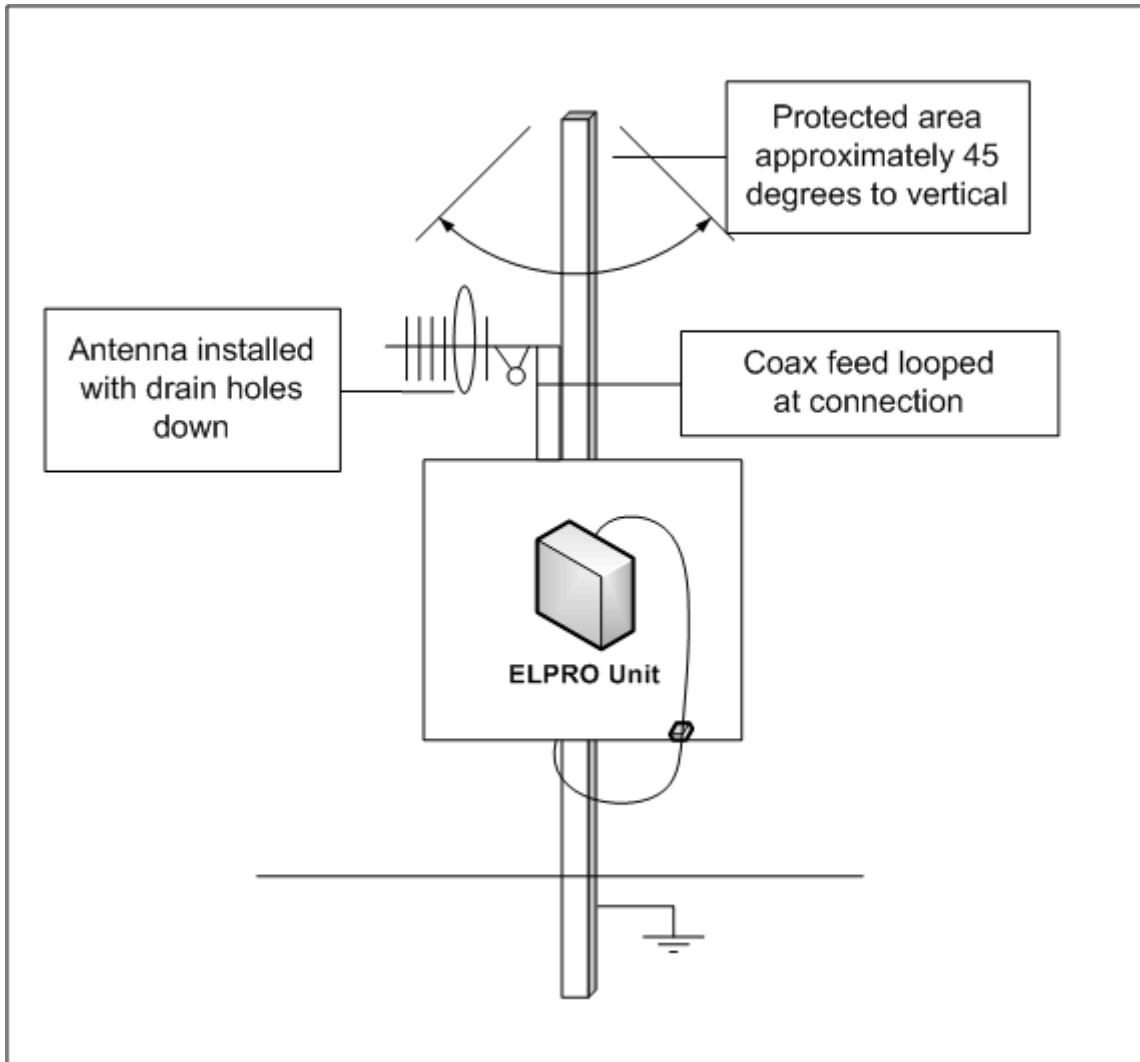



## Installing the power supply

The unit works with a 9-30 VDC 0.6 Amp CSA certified Class 2 power supply. For use in Class 1 Div 2 explosive areas, the power supply must be approved for Class 1 Div 2 use.

### Warning – explosion hazard

Do not disconnect while circuit is live unless area is known to be non-hazardous.

The following table shows the power supply requirements :

Power supply	105U-L-T	105U-L-R
12V	600 mA	250 mA
24V	300 mA	125 mA

The power supply can be a floating supply or negatively grounded.

The transmitter provides a 24V DC regulated supply for analog loop power. The supply is rated at 35 mA and should ONLY be used for powering analog loops.

To install the power supply:

1. Connect the positive lead to **Power Supply Input**.
2. Connect the negative lead to **Ground**.


### Note

To ensure internal surge protection works correctly, you must earth each unit using the Earth terminal.

You should connect the module to the same ground/earth point as the antenna mounting to avoid differences in earth potential during voltage surges.

Do NOT connect the positive side of the supply to Earth.

3. The following diagram illustrates the connection:

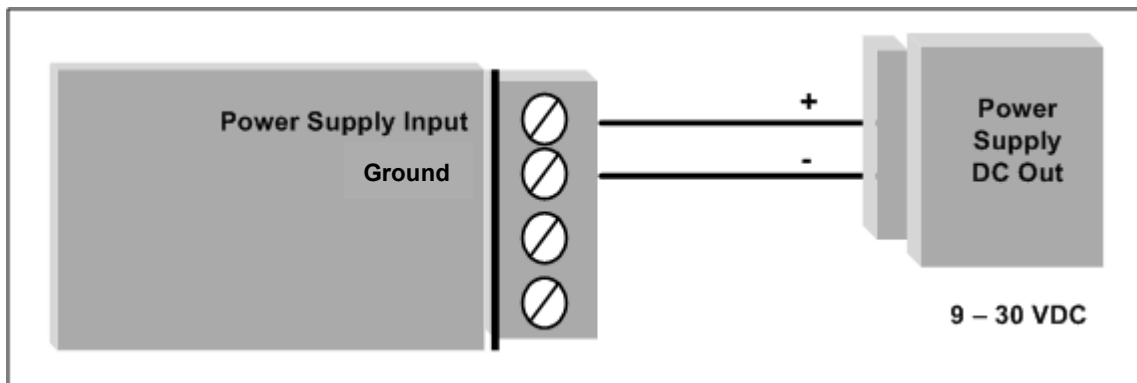



## Inputs and outputs

The units have the following inputs and outputs:

Input/output	105U-L-T	105U-L-R	Description	For more information, see ...
<b>Digital inputs</b>	2		Suitable for Voltage free contact, NPN transistor, 0-5V signal.	Digital inputs on page 21.
<b>Relay outputs</b>		3	250VAC 1A / 30VDC 1A.	Relay outputs Important Information on page 22.
<b>Status outputs</b>	2	2	Max 30VDC, 500 mA. Indicate module status, communication failure and local setpoint status.	Status outputs on page 23.
<b>Analog inputs</b>	1		4-20 mA with over-range and under-range. 0-10 mA with over-range.	Analog input on page 24.
<b>+24V Loop supply</b>	1		Provides power for 1 external current loop (up to 35 mA).	Installing the power supply on page 19.
<b>Analogue setpoint</b>	1		Allows discrete setpoint to be controlled from analog input. Threshold adjustable via rotary switch.	Refer to the <i>User Manual</i> .
<b>Thermocouple / millivolt input</b>	1		Provides measurement of E, J, K, T type Thermocouple, millivolt signals and user-defined thermocouple types.	Thermocouple input on page 27
<b>Thermocouple setpoint</b>	1		Lets you control discrete setpoint from thermocouple with threshold adjustable via rotary switch.	Refer to the <i>User Manual</i> .
<b>Pulse inputs</b>	2		Up to 10Hz.	Pulse input on page 28.
<b>Analog output</b>		1	0-22 mA, suitable for loop powered, floating input or single-ended input device.	Analog output on page 29.

For more information, see the next sections.



## Digital inputs

The 105U-L-T module provides two digital inputs suitable for:

- **Voltage free contacts** – e.g. mechanical switches; or
- **NPN transistor devices** – e.g. electronic proximity switches; or
- **0-5V signals** - 2V – 4V Minimum range.

### Note



PNP transistor devices are not suitable.

The unit provides contact wetting current of approximately 5mA to maintain reliable operation of driving relays.

Each digital input is connected between the appropriate **Digital Input** terminal and **Ground**.

Each digital input circuit includes a LED indicator that lights when the digital input is active (i.e. when the input circuit is closed).

To activate the digital input, the switching device resistance must be less than 200 ohms.

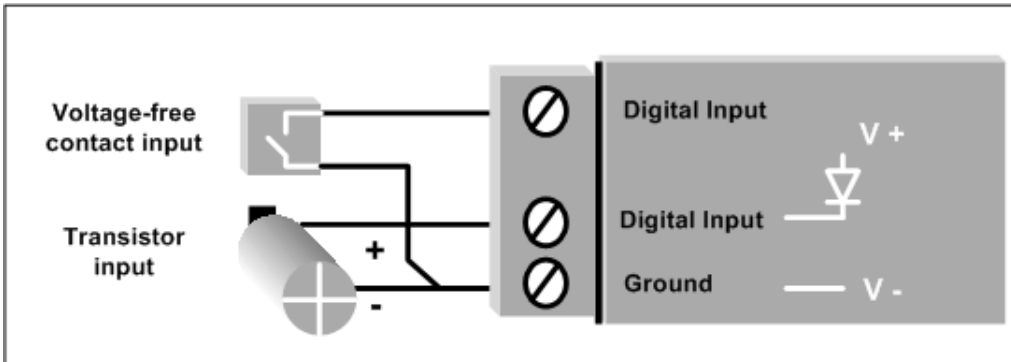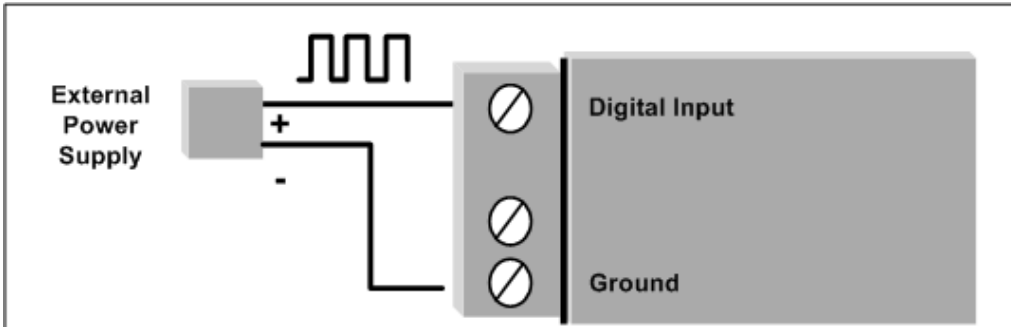Connection method	Example
Voltage free contact	
Active 0-5v signal device	 <p><b>Note</b> Use a solid state relay if the voltage range is not suitable. Voltage Range is low: 2V (max); high: 4V (min).</p>




## Relay outputs

The 105U-L-R module provides three normally open voltage-free relay contacts rated at 250VAC / 30VDC 1A.


You can use these outputs to directly control low-powered equipment or power larger relays for higher-powered equipment.

For inductive loads, ELPRO recommends:

**DC relays** - use flyback diodes across the external circuit to prevent arcing across the relay contacts.

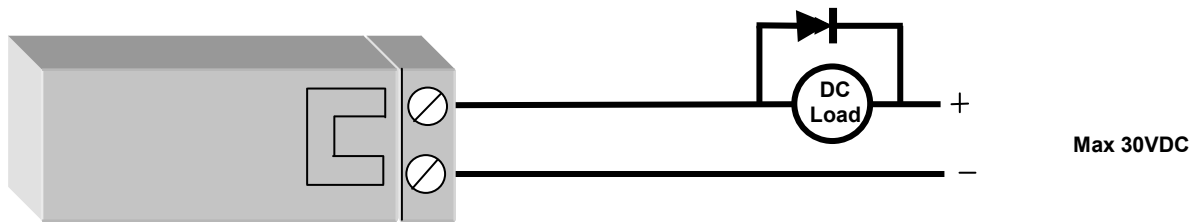

**AC relays** – use capacitors (e.g. 10nF 250V) to prevent arcing across the relay contacts.

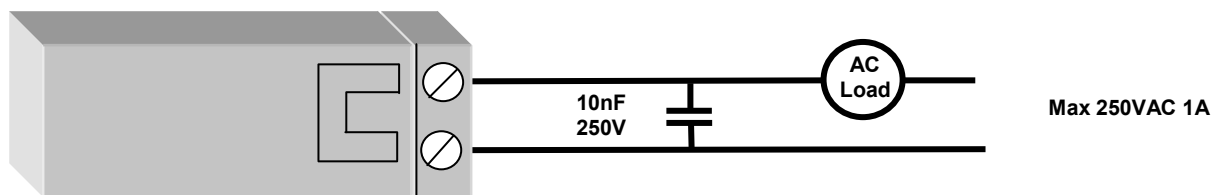

You can individually configure digital outputs to turn off if no command message is received by the output for a certain period. This feature provides an intelligent watchdog for each output, so communications failure at a transmitting site causes the output to revert to a known state.

The output circuit is connected to the appropriate pair of **Digital Output** terminals. Each digital output circuit includes a LED indicator that lights when the digital output is active. The LED flashes if the watchdog alarm is active.

### **IMPORTANT SAFETY INFORMATION**

In order to comply with Electrical Safety Standards, when connecting SELV **AND** voltages which are greater than SELV (30VAC or 60VDC) together, then Relay Output 2 must **NOT** be used in order to provide sufficient isolation between the outputs




## Status outputs

The unit contains the following status outputs:

- **System OK;**
- **Setpoint Output;** and
- **Communications Failure.**

Status outputs are FET output to common rated at 30VDC 500 mA.

Connect the output circuit to the appropriate Status **Output** terminal. Each status output circuit is associated with an LED indicator that lights lit when the digital output is active.

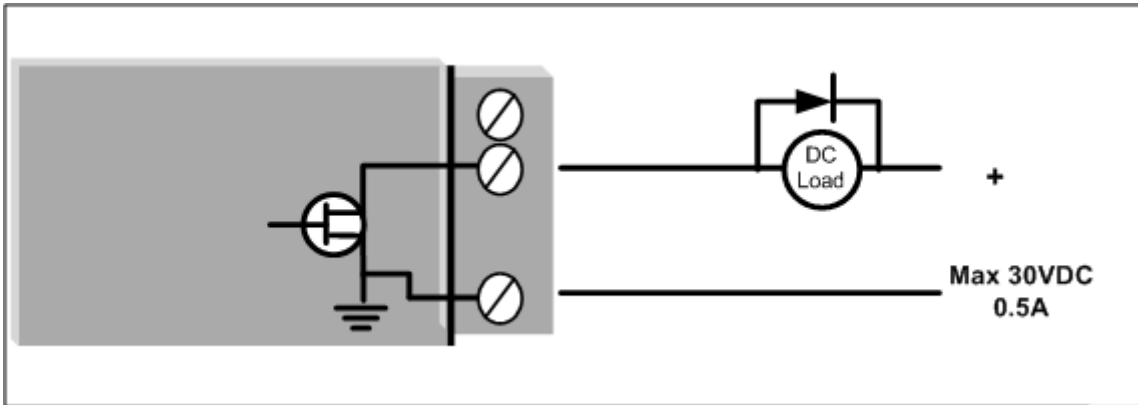

The following table details the status output behavior:

Status output	LED	LED status	Description
<b>System OK active (both modules)</b>	OK	Green	No fault detected
<b>System OK inactive</b>	OK	Red	<ul style="list-style-type: none"><li>• Internal fault detected.</li><li>• Supply voltage Low</li><li>• Analog Loop supply overloaded</li></ul>
<b>Setpoint Output (105U-L-T)</b>	SP	Green	Local setpoint attached to 4-20mA analog input.
<b>Communications Failure (105U-L-R)</b>	CF	Red	Watchdog alarms active on digital outputs or analog outputs.



## Analog input

The 105U-L-T module provides one 0 - 20 mA DC analog input for connecting to instrument transducers (e.g. level, moisture, pressure transducers, etc.).

---

**Note**

---

The 105U-L -T module inputs measure down to 0mA and can also be used for zero based signals (e.g. 0 - 10 mA).

---

The analog input has a positive and negative terminal and can be placed at any point in the current loop, providing neither input rises above the 24 volt **Analog Loop Supply** level.

Each input has a loop resistance of less than 250 ohms and zener diode protection is provided against over-voltage and reverse voltage.

---

**Note**

---

You may require additional protection in high voltage or noisy environments or for long wiring runs.

---

A 24VDC loop supply is available on the 105U-L-T module for powering the analog transducer loops. In this situation, connect the:

- **Analog loop** - between an **Analog Input (-)** terminal and **Ground**.
- **Positive terminal** – i.e. **Analog Input (+)** to the **+24V Analog Loop Supply**.

Externally powered loops may be connected by connecting the input between "Analog Input (+)" and "Analog Input (-)" Common mode voltage may be -0.5V to 27V.

ELPRO recommends using shielded cable for analog I/O loops to minimize induced noise and Radio Frequency Interference (RFI).

---

**Note**

---

You should only connect one end of the cable shield to Earth




---

To connect an analog signal from a PLC or DCS output to an analog input on the 105U-L-T, you must carefully check the internal circuit of the output as different devices use different ways to create an analog signal.






The following diagrams illustrate different connection methods:

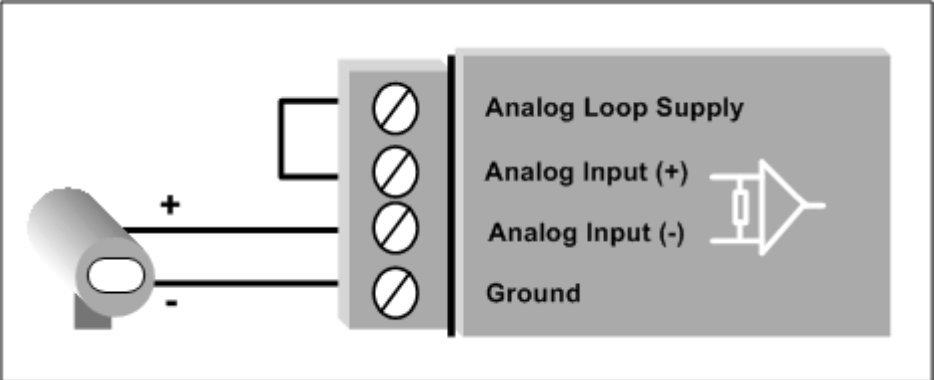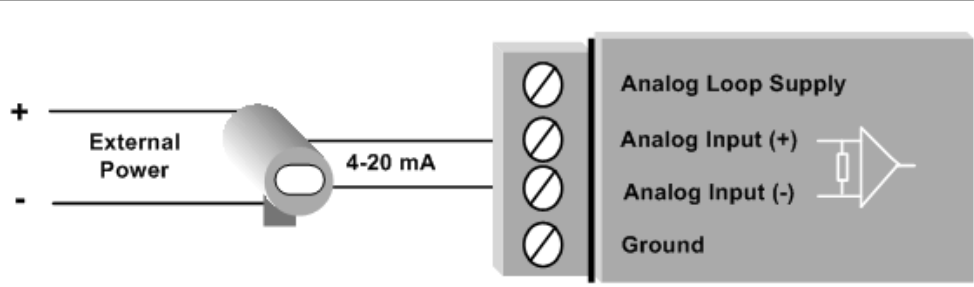Analog signal source	Example
2 wire transducer	 <p data-bbox="496 367 1433 745">Analog Loop Supply Analog Input (+) Analog Input (-) Ground</p>
4 wire transducer	 <p data-bbox="448 770 1425 1055">Analog Loop Supply Analog Input (+) Analog Input (-) Ground</p> <p data-bbox="448 1070 1425 1227"><b>Note</b> Analog input must be within 27V of Ground. If your terminal voltage exceeds this, you must use a loop isolator.</p>
Current source output	 <p data-bbox="448 1299 1465 1615">Analog Loop Supply Analog Input (+) Analog Input (-) Ground</p> <p data-bbox="448 1653 1465 1861"><b>Note</b> 1. Analog input must be within 27V of Ground. If your terminal voltage exceeds this, you must use a loop isolator. 2. Ground is connected to ground/earth. If you cannot ground the PLC COM, you must use a loop isolator.</p>

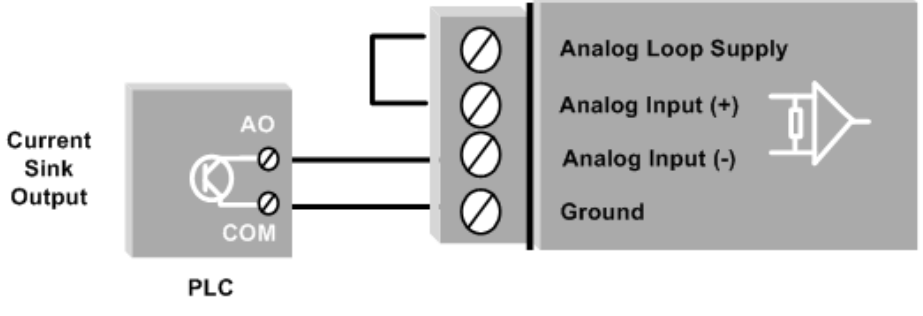

Analog signal source	Example
Current sink output	 <p data-bbox="518 705 1444 817"><b>Note</b> 1. Ground is connected internally to Earth. If you cannot ground the PLC COM, you must use a loop isolator.</p>




## Thermocouple input

The 105U-L-T provides one input suitable for connection to a thermocouple or a millivolt level signal. The module provides linearization tables for J, K and T type thermocouples and also supports other types via a user linearization table.

Millivolt signals in the range -10mV to +100 mV are supported.

For more information on configuring the thermocouple input and cold-junction compensation to suit your application, refer to the **User Manual**.

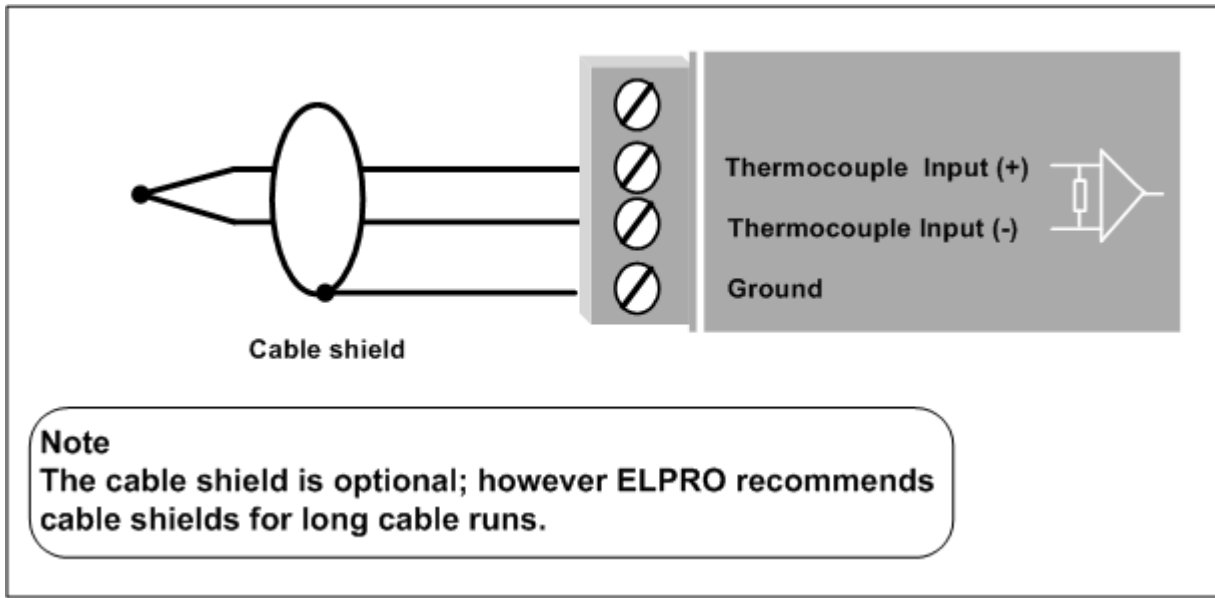



## Pulse input

The 105U-L-T module lets you configure the digital inputs as pulse inputs with the following characteristics:



Characteristic	Value
Maximum rate	10 Hz
Minimum off time	20 mSec
Minimum on time	20 mSec

Using this mode, you can map the pulse count to a remote output by transmitting the pulse count to a 105-G module register or re-generating as a Pulse Output on 105-1 or Digital Output on a 105-3 unit.

### Note

You should connect the pulse input in the same way as a digital input.

The following diagrams illustrate different connection methods:

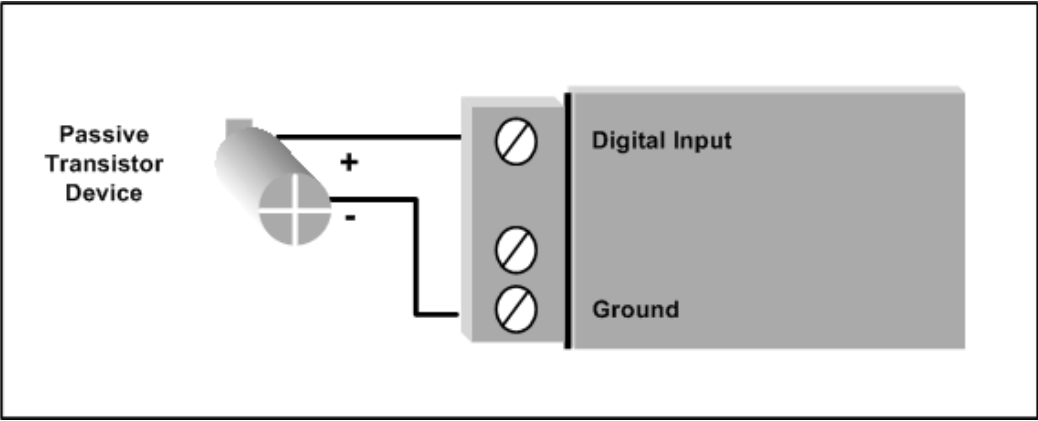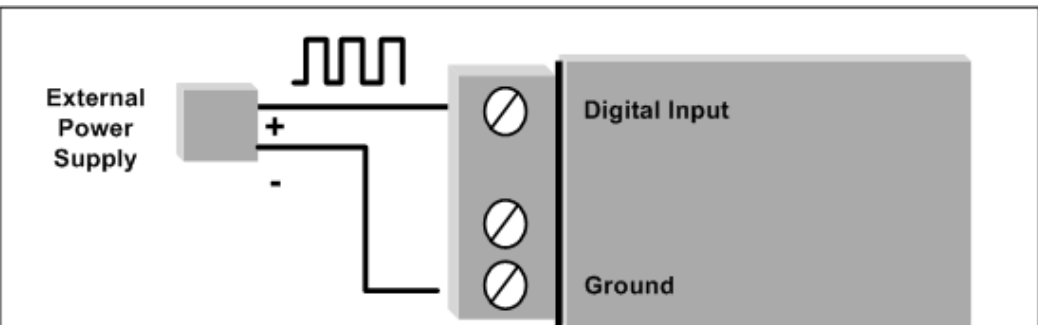Connection method	Example
Passive transistor	
Active pulse device	 <p><b>Note</b> Use a solid state relay if the voltage range is not suitable. Voltage Range is low: 2V (max); high: 4V (min).</p>



## Analog output

The 105U-L-R module provides a 4 - 20 mA DC analog output for connecting to instrument indicators to display remote analog measurements. The analog output is a current source provided from an internally generated +24V loop supply.



When connecting to an external device (e.g. electronic indicator, recorder, PLC / DCS input, etc.) by connecting the output between the **Analog Output** terminal (+) and the **COM** terminal (-).

### Note


Zener protection of analog outputs provides protection against short periods of over-voltage; however longer periods may result in module damage.

You can also individually configure analog outputs to turn off (i.e. 0 mA) if no command message is received to the output for a certain period.

The following diagrams illustrate different connection methods:

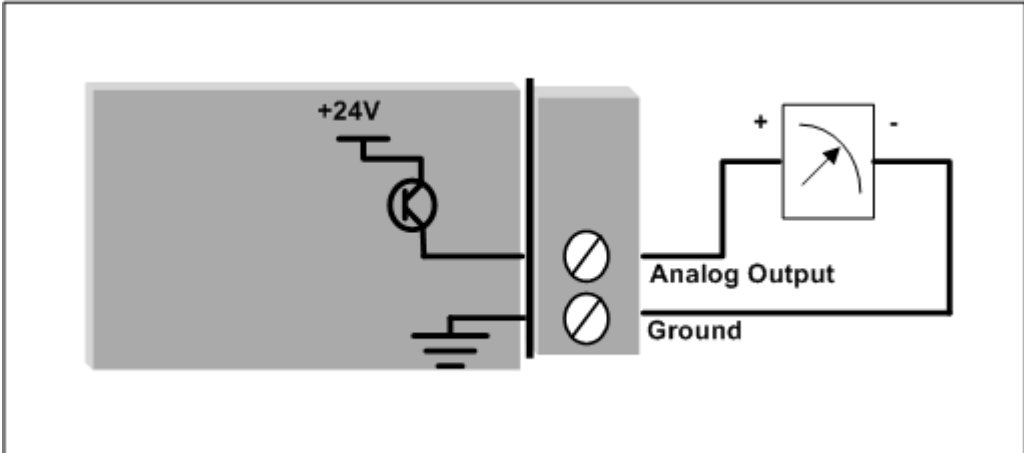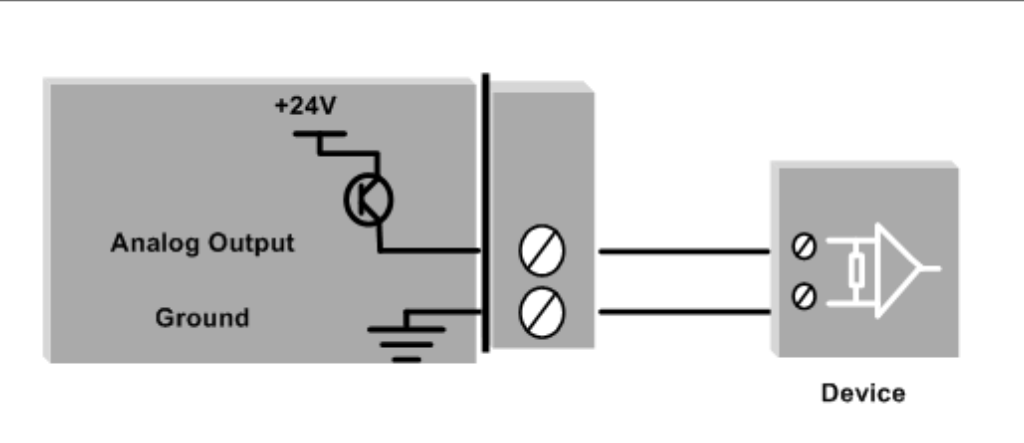Connection method	Example
Loop powered device	
Floating input device	

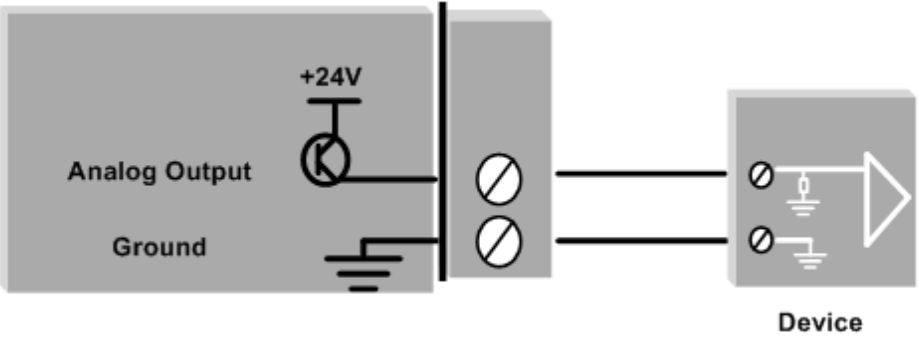

Connection method	Example
<b>To single-ended input device</b>	 <p>The diagram illustrates the connection of an Analog Output module to a single-ended input device. On the left, the Analog Output module is shown with a +24V supply and a Ground connection. The output terminal is connected to the input terminal of the Device, which also has a Ground connection.</p>



---

## Installing and configuring the unit

---

This section describes how to install and configure your unit and contains the following sections:

Section	Description	For more information, see ...
<b>Installing the unit</b>	Describes how to physically install your unit.	Installing the unit on page 32.
<b>Configuring your unit</b>	Describes the different ways to configure your unit.	Configuring your units on page 33.
<b>Testing your unit</b>	Describes ELPRO's recommendations for testing your unit.	Testing your units on page 34.


For more information, see the next sections.



## Installing the unit

To install the unit:

1. Connect signals to the supplied terminals.
2. Connect the radio antenna.
3. Install DIN rail to mount the module.
4. Clip the module to the DIN rail:

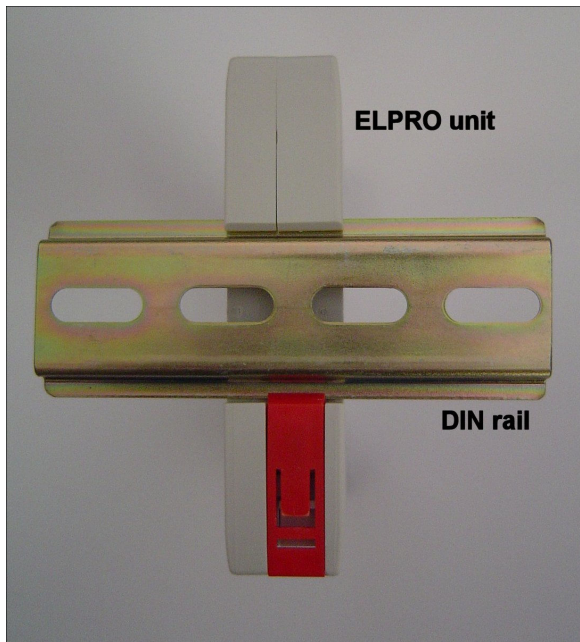

You can now configure your unit. For more information, [Configuring your units](#) on page 33.





## Configuring your units

You can configure your network using:

- **Default factory configuration** – that lets you easily setup your network as a simple send/receive; or
- **User-defined customized configuration** – that lets you set specific information about your network and allows communication with other ELPRO 105 series devices.

For more information on setting a user-defined customised configuration, see the **User Manual**.

For more information on setting the factory default configuration, refer to the **Quick Start Guide** included with your module.

The following table details the factory default configuration:

Signals sent over radio		
105U-L-T(Transmitter)	Sends	105U-L-R (Receiver)
Digital Input 1	⇒	Digital Output 1
Digital Input 2	⇒	Digital Output 2
Analog Setpoint	⇒	Digital Output 3
Analog input (4-20 mA)	⇒	Analog output

Other signals	
105U-L-T(Transmitter)	105U-L-R (Receiver)
Thermocouple Input (Not used)	<b>Communication Failure</b> (Comes on if no messages from 105U-L-T)
Setpoint Output (Local indication)	
System OK (On if system OK)	<b>System OK</b> (On if system OK)



## Testing your units

We recommend you bench test the complete system before installing a new system.

Configuration problems are easier to identify and fix when the units are next to each other.

The following table describes common problems and recommended solutions:

If your installation has ...	You should check ...	ELPRO recommends ...
<b>Poor radio channel communications</b> <ul style="list-style-type: none"><li>• TX LED flashes but no RX LED</li><li>• Output LEDs flash quickly</li></ul>	<ul style="list-style-type: none"><li>• The antenna installation.</li><li>• For radio interference on the same channel.</li><li>• The radio path is adequate.</li></ul>	<ul style="list-style-type: none"><li>• Higher performance antennas if the path is too long.</li><li>• Higher mounting points to overcome obstructions.</li><li>• Using an intermediate unit as a repeater.</li></ul>
<b>Red OK LED</b>	<ul style="list-style-type: none"><li>• Power Supply voltage</li></ul>	<ul style="list-style-type: none"><li>• Supply should be between 9 and 30VDC.</li></ul>
	<ul style="list-style-type: none"><li>• Analog loop supply current</li></ul>	<ul style="list-style-type: none"><li>• The analog loop supply is rated for 35 mA max.</li></ul>
	<ul style="list-style-type: none"><li>• Module configuration</li></ul>	<ul style="list-style-type: none"><li>• Your module configuration may be invalid. Re-load or restore factory default configuration.</li></ul>
<b>TX LED flashes but no RX LED (bench testing)</b>	<ul style="list-style-type: none"><li>• Ensure the 105U-L-R is set to the same country and frequency band as the 105U-L-T</li></ul>	<ul style="list-style-type: none"><li>• Register the receiver with the transmitter. (Refer to the <b>Quick Start Guide</b>)</li></ul>
<b>RX LED Flashes but no outputs change</b>	<ul style="list-style-type: none"><li>• For a user-defined customized configuration, - check the configuration.</li></ul>	<ul style="list-style-type: none"><li>• Check the configuration and re-program the modules.</li></ul>
	<ul style="list-style-type: none"><li>• For default configuration, check the receiver is registered with the transmitter.</li></ul>	<ul style="list-style-type: none"><li>• Repeat the procedure to register the receiver with the transmitter.</li></ul>

For support for other testing issues, please contact ELPRO.



## Unit specifications

This section details the specifications for each unit.

### Transmitter unit

Input/output	Number	Additional information
Digital inputs	2	Dry-contact digital inputs slow-pulsed at 10Hz. All inputs are suitable for voltage free contacts (e.g. mechanical switches) or NPN transistor devices (e.g. electronic proximity switches). <b>NOTE:</b> PNP transistor device inputs are NOT suitable.
Status outputs	2	Separate System OK and Setpoint Status
Analog inputs	1	0-20mA differential input; 16-bit resolution, 0.1% accuracy, 10 ohm input impedance.
Thermocouple inputs	1	J, K or T type thermocouple with on-board cold-junction compensation. Cold junction compensation accuracy $\pm 1^\circ$ over ambient temp range: $-40^\circ$ to $+70^\circ\text{C}$ .
Power supply	1	9-30 VDC 0.6 Amp CSA certified Class 2 power supply. For use in Class 1 Div 2 explosive areas, the power supply must be approved for Class 1 Div 2 use. <b>WARNING:</b> Explosion hazard - do not disconnect while circuit is live unless area is known to be non-hazardous.
Transmitter	1	5 mW or 500 mW DFSK Fixed Frequency Transmitter.
Frequency	868.525 MHz 869.875MHz	500 mW - 5km out of plant, 1km obstructed environment. 5 mW – 1km out of plant. 300m obstructed environment

### Receiver unit

Input/output	Number	Additional information
Digital outputs	3	Voltage-free contacts rated at 250 VAC, 1A, 30VDC 1A 2 for digital inputs and 1 for setpoint.
Status outputs	2	Separate System OK and communication failure output.
Analog output	1	16-bit resolution, 0.1% accuracy, single-ended source output.
Power supply	1	9-30 VDC 0.25 Amp CSA certified Class 2 power supply. For use in Class 1 Div 2 explosive areas, the power supply must be approved for Class 1 Div 2 use. <b>WARNING:</b> Explosion hazard - do not disconnect while circuit is live unless area is known to be non-hazardous.
Radio receiver	1	High sensitivity DFSK Fixed Frequency receiver.
Frequency	868.525 MHz 869.875MHz	Actual frequency range depends on Paired Transmitter.
Sensitivity	-111 dBm	At BER 8%.



## Ancillary hardware reference information

This section contains reference information about additional hardware components you may need for your unit.

### *RS232 serial cable*

You can connect the unit to a PC using an RS-232 serial cable to:

- **Transfer configuration information;**
- **Perform factory and field-testing.**

The serial port is an 8 pin RJ-45 plug that communicates using standard RS-232 signals:


Signal information	Value
<b>Baud rate</b>	9600
<b>Bits</b>	8 bits with 1 stop bit
<b>Parity</b>	No parity

ELPRO supplies a green configuration cable wired to the following pin-out:

#### Note

The following pin-out information is for reference only.

RJ-45	Required	Signal name	Normal colour	DB9
1		Ring Indicator	Green / White	9
2		Data Carrier Detect	Green	1
3	Y	Data Terminal Ready	Orange / White	4
4	Y	Signal Common	Blue	5
5	Y	Receive Data (from Modem)	Blue / White	2
6	Y	Transmit Data (to Modem)	Orange	3
7		Clear to Send	Brown / White	8
8		Request to Send	Brown	7

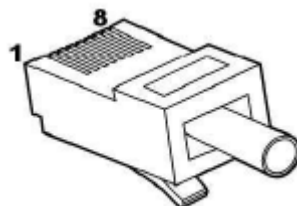



---

## Index

---

2 wire transducer .....	25	lightening rod .....	14
4 wire transducer .....	25	lightening strike .....	14
AC relays .....	22	line of sight .....	13
active pulse device .....	<i>See</i>	linearization tables .....	27
active signal device .....	21	loop powered device .....	29
analog input .....	24	maximum transmission distance .....	13
analog output .....	29	mechanical switches .....	21
antennas .....	15	millivolt signal .....	27
compatible cables .....	11	net gain .....	12
dipole .....	15	obstructions .....	13
installing .....	13	intermediate .....	13
polarization .....	17	over-voltage .....	24
supported antennas .....	11	passive transistor .....	28
arcing .....	22	pin-out .....	36
bench testing .....	34	PLC .....	24
cable		polarization .....	17
loss .....	12	polarized .....	17
cables		power supply .....	19
for antennas .....	11	installing .....	19
supported cables .....	11	problems .....	34
CFD890EL .....	11	pulse input .....	28
coaxial surge diverter .....	14	PVC tape .....	14
configuration		Radio Frequency Interference .....	24
default factory .....	33	receiver	
user-defined customized .....	33	components .....	9
configuring .....	33	front panel .....	10
connections		LEDs .....	10
taping .....	14	terminal connections .....	9
current sink output .....	26	relay outputs .....	22
current source output .....	25	reliable path .....	13
DC relays .....	22	repeater .....	13
DCS .....	24	reverse voltage .....	24
digital inputs .....	21	RFI .....	24
DIN rail .....	32	RJ-45 .....	36
dipole antennas .....	15	rotary switch .....	7
electronic proximity switches .....	21	changing position .....	7
explosive areas .....	19	setpoint levels .....	7
floating input device .....	29	RS-232 .....	36
flyback diodes .....	22	serial cable .....	36
gain		setpoint	
net gain .....	12	thermocouple .....	20
horizontal polarization .....	17	setpoint levels .....	7
installing .....	32	SG900-6 .....	11
instrument transducers .....	24	SG900EL .....	11
interference .....	13	shielding .....	14
internal surge protection .....	19	signals .....	33
LEDs		single-ended input device .....	30
receiver .....	10	SMA connector .....	14
transmitter .....	8	solutions .....	34



---

specifications .....	35	transmitter	
status outputs.....	23	components .....	6
surge diverter .....	14	front panel.....	7
surge protection .....	14	terminal connections.....	6
surge suppression.....	14	UV-stabilized tape.....	14
switches		vertical polarization .....	17
electronic proximity.....	21	voltage free contact.....	21
switches		vulcanising tape .....	14
mechanical .....	21	watchdog alarm.....	22
taping connections.....	14	WH900 .....	11
testing .....	34	YU16/900 .....	11
thermocouple .....	27	YU6/900 .....	11
thermocouple setpoint.....	20	zener diode protection .....	24
transducers .....	24	zero based signals .....	24