



RedFox 5728 Series

Industrial routing switches



Table of Contents

1. General Information	3
1.1. Legal Information	3
1.2. About This Guide	3
1.3. Software Tools	3
1.4. License and Copyright for Included FLOSS	3
1.5. WeOS	3
2. Safety and Regulations	4
2.1. Warning Levels	4
2.2. Safety Information	5
2.3. Care Recommendations	7
2.4. Product Disposal	8
2.5. Compliance Information	9
2.5.1. Agency Approvals and Standards Compliance	9
2.5.2. FCC Part 15.105 Class A Notice	9
2.5.3. Simplified Declaration of Conformity	9
3. Product Description	10
3.1. Product Description	10
3.2. Available Models	11
3.3. Hardware Overview	11
3.4. Connector Information	12
3.4.1. Power Input	12
3.4.2. I/O Connection	13
3.4.3. Console Port	14
3.4.4. Micro SD	14
3.4.5. SFP Transceivers	14
3.5. LED Indicators	16
3.6. Dimensions	17
4. Installation	18
4.1. Mounting	18
4.1.1. Rack Mounting	18
4.2. Protective Earth Connection	18
4.3. Cooling	18
5. Specifications	19
5.1. Interface Specifications	19
5.2. Type Tests and Environmental Conditions	23
6. Revision Notes	27

1. General Information

1.1. Legal Information

The contents of this document are provided “as is”. Except as required by applicable law, no warranties of any kind are made in relation to the accuracy and reliability or contents of this document, either expressed or implied, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Westermo reserves the right to revise this document or withdraw it at any time without prior notice.

Under no circumstances shall Westermo be responsible for any loss of data or income or any special, incidental, and consequential or indirect damages howsoever caused.

More information about Westermo can be found at www.westermo.com.

1.2. About This Guide

This guide is intended for installation engineers and users of the Westermo products.

It includes information on safety and regulations, a product description, installation instructions and technical specifications.

1.3. Software Tools

Related software tools are available at www.westermo.com/support/software-tools.

1.4. License and Copyright for Included FLOSS

This product includes software developed by third parties, including Free/Libre Open Source Software (FLOSS). The specific license terms and copyright associated with the software are included in each software package respectively. Please visit the product web page for more information.

Upon request, the applicable source code will be provided. A nominal fee may be charged to cover shipping and media. Please direct any source code request to your normal sales or support channel.

1.5. WeOS

This product runs WeOS 5 (Westermo Operating System). Instructions for quick start, configuration and factory reset are found in the WeOS user documentation at www.westermo.com.

2. Safety and Regulations

2.1. Warning Levels

Warning signs are provided to prevent personal injuries and/or damages to the product. The following levels are used:





Level of warning	Description	Consequence personal injury	Consequence material damage
 WARNING	Indicates a potentially hazardous situation	Possible death or major injury	Major damage to the product
 CAUTION	Indicates a potentially hazardous situation	Minor or moderate injury	Moderate damage to the product
 NOTICE	Provides information in order to avoid misuse of the product, confusion or misunderstanding	No personal injury	Minor damage to the product
 NOTE	Used for highlighting general, but important information	No personal injury	Minor damage to the product

Table 1. Warning levels

2.2. Safety Information

Before installation:

Read this manual completely and gather all information available on the product. Make sure it is fully understood. Check that your application does not exceed the safe operating specifications for the product.



WARNING - SAFETY DURING INSTALLATION

The product must be installed and operated by qualified service personnel and installed into an apparatus cabinet or similar, where access is restricted to service personnel only.

During installation, ensure a protective earthing conductor is first connected to the protective earthing terminal (only valid for metallic housings). Westermo recommends a cross-sectional area of at least 4 mm².

Upon removal of the product, ensure that the protective earthing conductor is disconnected last.



WARNING - HAZARDOUS VOLTAGE

Do not open an energized product. Hazardous voltage may occur when connected to a power supply.

For RedFox models with a rated voltage above 48 VDC or 30 VAC: Apply the protective cap (delivered with the product) on the power cable.




WARNING - PREVENT ACCESS TO HAZARDOUS VOLTAGE CABLE

Apply the protective cap (delivered with the product) on the power cable, according to the illustrated steps below.

To prevent accidentally pulling out wires, make sure the power cable and the wires are firmly attached to the protective cap.

For screw connectors, make sure the screws are properly tightened, as well as routing the wires separately from other wires. For connectors with straps, fasten the cable as strain relief, as well as routing the wires separately.

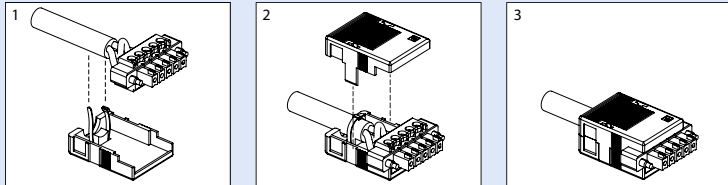

WARNING - PROTECTIVE FUSE

It must be possible to disconnect manually from the power supply. Ensure compliance to national installation regulations.

Replacing the internal fuse must only be performed by Westermo qualified personell.



WARNING - POWER SUPPLY CONNECTION

There are safety regulations on which power sources that shall be used in conjunction with the product. Refer to Interface Specifications.



WARNING - REDUCE THE RISK OF FIRE

To reduce the risk of fire, use only telecommunication line cords with a cable diameter of AWG 26 or larger. Regarding power cable dimensions, see Interface Specifications.



CAUTION - CLASS 1 LASER PRODUCT

Do not look directly into a fibre optical port or any connected fibre, although the product is designed to meet the Class 1 Laser regulations and complies with 21 CFR 1040.10 and 1040.11.



CAUTION - HANDLING OF SFP TRANSCEIVERS

SFP transceivers are supplied with plugs to avoid contamination inside the optical port. They are very sensitive to dust and dirt. If the fibre is disconnected from the product, the protective plugs on the transmitter/receiver must be connected. The protective plugs must be kept on during transportation. The fibre optics cables must be handled the same way.



CAUTION - CORROSIVE GASES

If the product is placed in a corrosive environment, it is important that all unused connector sockets are protected with a suitable plug, in order to avoid corrosion attacks on the gold plated connector pins.



CAUTION - ELECTROSTATIC DISCHARGE (ESD)

Prevent electrostatic discharge damages to internal electronic parts by discharging your body to a grounding point (e.g. use a wrist strap).



CAUTION - CABLE TEMPERATURE RATING FOR FIELD TERMINAL WIRES

There may be a requirement on the minimum temperature rating of the cable to be connected to the field wiring terminals, see Interface Specifications.

2.3. Care Recommendations

Follow the care recommendations below to maintain full operation of the product and to fulfill the warranty obligations:

- Do not drop, knock or shake the product. Rough handling above the specification may cause damage to internal circuit boards.
- Use a dry or slightly water-damp cloth to clean the product. Do not use harsh chemicals, cleaning solvents or strong detergents.
- Do not paint the product. Paint can clog the product and prevent proper operation.

If the product is used in a manner not according to specification, the protection provided by the equipment may be impaired.

If the product is not working properly, contact the place of purchase, nearest Westermo distributor office or Westermo technical support.

2.4. Product Disposal

This symbol means that the product shall not be treated as unsorted municipal waste when disposing of it. It needs to be handed over to an applicable collection point for recycling electrical and electronic equipment.

By ensuring the product is disposed of correctly, you will help to reduce hazardous substances and prevent potential negative consequences to both environment and human health, which could be caused by inappropriate disposal.



Figure 1. WEEE symbol for treatment of product disposal

2.5. Compliance Information

2.5.1. Agency Approvals and Standards Compliance

Type	Approval/Compliance
EMC	<ul style="list-style-type: none">• EN 50121-4/IEC 62236-4, Railway signalling and telecommunications apparatus• EN/IEC 61000-6-2, Immunity industrial environments• EN/IEC 61000-6-4, Emission industrial environments• EN/IEC 61000-6-5, Immunity power station and substation environment
Substation automation	<ul style="list-style-type: none">• IEEE 1613, Testing Requirements for Communications Networking Devices Installed in Electric Power Substations• IEC 61850-3, Communication networks and systems for power utility automation – Part 3: General requirements
Safety	<ul style="list-style-type: none">• EN/IEC 61010-1, Safety requirements for electrical equipment for measurement, control, and laboratory use - Part 1: General requirements• UL 61010-2-201, Safety requirements for electrical equipment for measurement, control, and laboratory use - Part 2-201: Particular requirements

Table 2. Agency approvals and standards compliance

2.5.2. FCC Part 15.105 Class A Notice

This product has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference when the product is operated in a commercial environment.

This product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the user manual, may cause harmful interference to radio communications. Operation of this product in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at the users own expense.

2.5.3. Simplified Declaration of Conformity

Hereby, Westermo declares that this product is in compliance with applicable EU directives and UK legislations. The full declaration of conformity and other detailed information is available at www.westermo.com/support/product-support.



Figure 2. The European Conformity and the UK Conformity Assessment markings

3. Product Description

3.1. Product Description

RedFox-5728 takes communication reliability for substations to a new level. We know that in critical substation automation applications, even the loss of a single piece of data can disturb the operations, and that is why RedFox-5728 brings the highest reliability to your network. Withstanding the toughest environmental conditions, including the high EMI levels derived from load switching and lightning strikes and extreme ambient temperatures, RedFox-5728 ensures 100% uptime, no matter what.

IEC 61850-3 and IEEE 1613 standards define the requirements and test levels for networking devices. They specify two different device reliability classes: Class 1 devices, which allow for communication errors; and Class 2 devices, which do not allow loss of a single transmission package even during the highest electro magnetic disturbances (EMI). RedFox-5728 meets or exceeds all test levels for Class 2 fulfilment, attaining KEMA type test gold certification, ensuring zero down-time, communication losses, delays or errors.


Superior build quality, the exclusive use of industrial grade components and extensive in-house testing results in class-leading MTBF and extended service life. Designed to run efficiently from either one or two power inputs, with dual internal power supplies fully isolated from each other and all other interfaces. The 28-port switch has all connectors located at the front for easy access and a range of different port configurations, customizable with SFP transceivers.

For resilient operations in substations not only is the most robust hardware needed, but also the most robust software. Available with both layer 2 and layer 3 functionality, RedFox-5728 is powered by the next generation WeOS operating system, which ensures continuous operation and support for an expanding range of protocols and features. Intuitive set-up and configuration enable easy and cost-efficient installation and removes the need for specialized IT support or training. Recognizing the growing sophistication of cyberattacks, an extensive suite of cyber security tools is also available.

3.2. Available Models

Art. no.	Model	No. of SFP ports	No. of copper ports	Layer
3641-4550	RedFox-5728-F4G-T24G-HV	4	24	Layer 2
3641-4555	RedFox-5728-F4G-T24G-HVHV	4	24	Layer 2
3641-4560	RedFox-5728-F16G-T12G-HV	16	12	Layer 2
3641-4565	RedFox-5728-F16G-T12G-HVHV	16	12	Layer 2
3641-4450	RedFox-5728-E-F4G-T24G-HV	4	24	Layer 3
3641-4455	RedFox-5728-E-F4G-T24G-HVHV	4	24	Layer 3
3641-4460	RedFox-5728-E-F16G-T12G-HV	16	12	Layer 3
3641-4465	RedFox-5728-E-F16G-T12G-HVHV	16	12	Layer 3

3.3. Hardware Overview

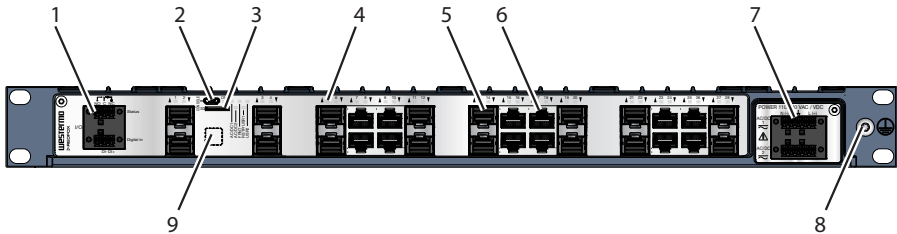

No.	Description	No.	Description
1	I/O connection	2	Console port
3	Micro SD	4	LED indicators
5	100/1000 Mbit/s SFP slots (number depending on model)	6	10/100/1000 Mbit/s TX ports (number depending on model)
7	Power input	8	Protective earth
9	Label with QR code ^a		

^aThe base MAC address and production date of the product is included in the front label QR code

Figure 3. Location of interface ports and LED indicators, illustrated by a RedFox-5728-F16G-T12G-HVHV

3.4. Connector Information

3.4.1. Power Input

Illustration	Position	Product marking	Direction	Description	
	AC/DC1	L(+)	Input	Line/Phase (AC), positive (DC)	
		N(-)	Input	Neutral (AC), negative/return (DC)	
		⏏	Input	Functional earth	
	AC/DC2	AC/DC2	L(+)	Input	Line/Phase (AC), positive (DC)
			N(-)	Input	Neutral (AC), negative/return (DC)
			⏏	Input	Functional earth

Table 3. Power input HVHV

Illustration	Position	Product marking	Direction	Description
	AC/DC1	L(+)	Input	Line/Phase (AC), positive (DC)
		N(-)	Input	Neutral (AC), negative/return (DC)
		⏏	Input	Functional earth

Table 4. Power input HV




WARNING - PREVENT ACCESS TO HAZARDOUS VOLTAGE CABLE

Apply the protective cap (delivered with the product) on the power cable, according to the illustrated steps below.

To prevent accidentally pulling out wires, make sure the power cable and the wires are firmly attached to the protective cap.

For screw connectors, make sure the screws are properly tightened, as well as routing the wires separately from other wires. For connectors with straps, fasten the cable as strain relief, as well as routing the wires separately.

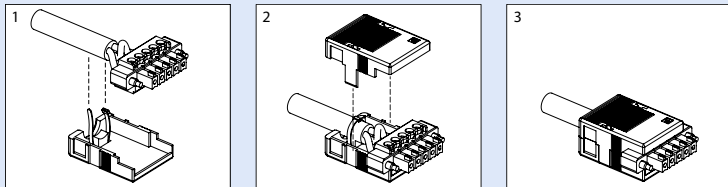

CAUTION - CABLE TEMPERATURE RATING FOR FIELD TERMINAL WIRES

There may be a requirement on the minimum temperature rating of the cable to be connected to the field wiring terminals, see Interface Specifications.

3.4.2. I/O Connection

Illustration	Position	Product marking	Direction	Description
<p>The diagram shows a panel with several terminals. At the top, there are three terminals labeled NO, C, and NC. Below them are two pairs of terminals labeled Digital in. At the bottom, there are two terminals labeled DI-DI+.</p>	Digital in	DI+	Input	Digital in, positive
	Digital in	DI-	Input	Digital in, negative
	Status	NO	Output	Alarm (status) relay contact:
		C	Output	
Digital in	NC	Output	NO - Normally Open C - Common NC - Normally Closed	

Table 5. I/O connection

The Digital in is an opto-isolated digital input, which can be used to monitor external events.

The Status output is a potential free, opto-isolated, alternation (Form-C) solid-state relay. This can be configured to monitor various alarm events within the RedFox-5728 product, see *WeOS Management Guide*. An external load in series with an external DC voltage source is required for proper functionality.

Unit condition	Status NO- C	Status NC-C
Unpowered / pre-operational or Alarm active	OPEN	CLOSED
Operational and Alarm inactive	CLOSED	OPEN

Table 6. Status output

3.4.3. Console Port

The console port can be used to connect to the CLI (Command Line Interface). The console connector is a micro USB cable that connects to a FTDI FT232R USB to serial converter internally. For drivers, refer to www.ftdichip.com and download the appropriate VCP driver.

Remove the protective cover before inserting the console cable. After removing the console cable, be sure to reassemble the protective cover again.

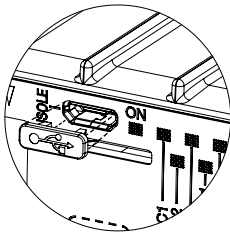


Figure 4. Remove protective cover for the console port

3.4.4. Micro SD

To insert the micro SD card correctly, turn the gold plated pins upwards.

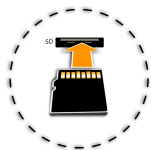


Figure 5. Insertion of micro SD card

3.4.5. SFP Transceivers

The product supports UL and Westermo labelled SA-approved transceivers only. See Westermo's modular transceivers datasheets 100 Mbit and 1 Gbit for SA-approved SFP

transceivers, which can be downloaded from the product support pages at www.westermo.com/support/product-support.

Each SFP slot can hold one SFP transceiver. See "*Transceiver User Guide 6100-0000*" for transceiver handling instructions, which also can be downloaded from the product support pages at www.westermo.com/support/product-support.

In the event of contamination, the optical connectors in the SFP transceivers should only be cleaned by the use of forced nitrogen and some kind of cleaning stick. Recommended cleaning fluids are methyl-, ethyl-, isopropyl- or isobutyl alcohol, hexane or naphtha.



CAUTION - HANDLING OF SFP TRANSCEIVERS

SFP transceivers are supplied with plugs to avoid contamination inside the optical port. They are very sensitive to dust and dirt. If the fibre is disconnected from the product, the protective plugs on the transmitter/receiver must be connected. The protective plugs must be kept on during transportation. The fibre optics cables must be handled the same way.

3.5. LED Indicators

LED	Status	Description
ON	OFF	Product has no power
	GREEN	All OK, no alarm condition
	RED	Alarm condition, or until product has started up. (Alarm conditions are configurable, see <i>WeOS Management Guide</i>)
	BLINK	Location indicator ("Here I am!"). Activated when connected to WeConfig tool, or upon request from web or/and CLI. RED BLINK during boot indicates pending cable factory reset.
RSTP/ USR1	OFF	RSTP disabled
	GREEN	RSTP enabled
	BLINK	Product selected as RSTP/STP root switch
	USR1	Configurable, see <i>WeOS Management Guide</i>
FRNT	OFF	FRNT disabled
	GREEN	FRNT OK
	RED	FRNT error
	BLINK	Product configured as FRNT focal point
AC/DC1	OFF	Product has no power
	GREEN	Power OK on AC/DC1
	RED	AC/DC1 input voltage is below operating voltage limit
AC/DC2 ^a	OFF	Product has no power
	GREEN	Power OK on AC/DC2
	RED	AC/DC2 input voltage is below operating voltage limit
USR2	Configurable, see <i>WeOS Management Guide</i>	
TX/FX ports	OFF	No link
	GREEN	Link established
	GREEN FLASH	Data traffic indication
	YELLOW	Port alarm and no link. Or if FRNT or RSTP mode, port is blocked.

^aOnly available on RedFox-5728 HVHV models

Table 7. LED indicators

3.6. Dimensions

Dimensions are stated in mm.

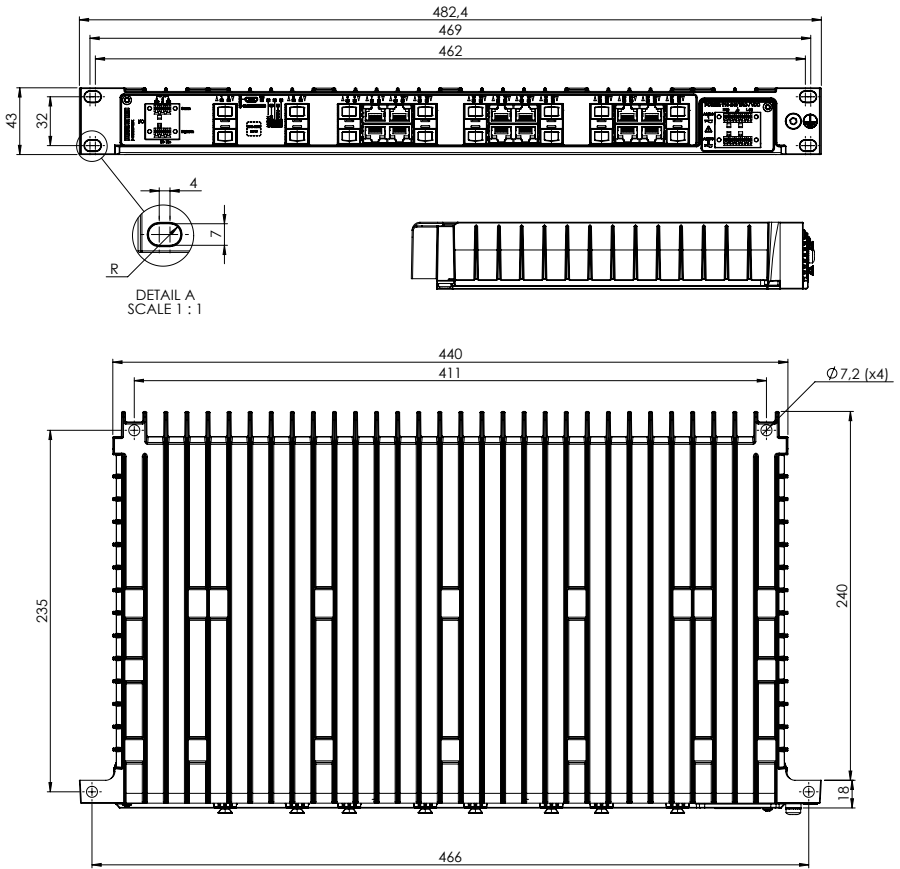


Figure 6. Dimensional drawing, illustrated by a RedFox-5728-F16G-T12G-HVHV

4. Installation

4.1. Mounting

RedFox-5728 is designed for installation in 19" rack solutions, with a shallow depth of 240 millimetres. It can also be wall mounted as an installation option.

4.1.1. Rack Mounting

The product can be mounted in all directions inside a 19" apparatus cabinet. Use supplied M6x25 (Philips no. 3) or 1/4x1" screws.



Figure 7. Rack mounted product

4.2. Protective Earth Connection

For correct function, the earth connection needs to be properly connected to a designated PE rail. See the figure below. Torx: T25. Torque: 3.2 Nm.



Figure 8. Earth connection

4.3. Cooling

This product relies on convection cooling. To avoid obstruction of the airflow around the product, follow the spacing recommendations.

For mounting in 19" apparatus cabinet without forced ventilation, a minimal spacing of 1U according to IEC 60297 or 45 mm (1.75") above/below is recommended. With forced ventilation, no minimal spacing is required as long as the temperature of the rear cooling plates does not exceed +85°C (+185°F).

5. Specifications

5.1. Interface Specifications



NOTE - USE OF ANTISTATIC ARM-WRIST BAND

To minimize the risk of exposing the unit to unintentional large static electric fields - if service and maintenance need to be performed during operation, always use an antistatic arm-wrist band.

Power port		
Rated voltage	110-240 VAC, 50-60 Hz, 110-240 VDC	
Operating voltage	85-264 VAC, 47-63 Hz, 85-264 VDC	
Rated current ^{ab}	RedFox-5728-(E)-F4G-T24G-HV	0.14 A at 240 V AC/DC 0.27 A at 110 V AC/DC
	RedFox-5728-(E)-F4G-T24G-HVHV	0.14 A at 240 V AC/DC 0.27 A at 110 V AC/DC
	RedFox-5728-(E)-F16G-T12G-HV	0.16 A at 240 V AC/DC 0.31 A at 110 V AC/DC
	RedFox-5728-(E)-F16G-T12G-HVHV	0.16 A at 240 V AC/DC 0.31 A at 110 V AC/DC
Fuse rating	4A(T), 350 VAC/VDC, breaking capacity 100 A, UL248-14	
Rated frequency	DC, 50-60 Hz	
Inrush current, I _{2t} ^c	4 mA ² s at 240 VAC, 50 HzDC, 50-60 Hz 0.4 mA ² s at 110 VAC, 60 Hz 2 mA ² s at 240 VDC 0.1 mA ² s at 110 VDC	
Startup current ^d	2x nominal current	
Polarity	Reverse polarity protected	
Redundant power supply	Yes (HVHV models)	
Shielded cable	Not required	
Isolation	All other ports	
Connector	Detachable screw terminal	
Conductor cross section (flexible)	0.5-1.5 mm ² (AWG 20-16). Use copper conductors only.	
Stripping length cable	6-7 mm	
Cable temperature rating	Minimum temperature rating of the cable to be connected to the field wiring terminals is +77 °C	
Tightening torque, terminal screw	0.34 Nm	
Tightening torque, screw flange	0.34 Nm	

^aFor HVHV models, AC/DC1 shall be regarded as the primary supply input, which gives the highest efficiency. When both AC/DC1 and AC/DC2 inputs are energized, some portion of the unit's power consumption will be drawn from AC/DC2, while AC/DC1 will utilize the majority of the power consumption.

^bIncluding SFP transceivers

^cMeasured for 1 second at startup

^dRecommended external supply current capability for proper startup

I/O connection, Digital input^a	
Isolation to	All other ports
Connector	Detachable screw terminal
Conductor cross section (flexible)	0.08-1.5 mm ² (AWG 28-16). Use copper conductors only.
Stripping length cable	7 mm
Cable temperature rating	Minimum temperature rating of the cable to be connected to the field wiring terminals is +77 °C
Tightening torque, terminal screw	0.22-0.25 Nm
Terminal torque, screw flange	0.3 Nm
Circuit type	SELV
Maximum voltage/current	60 VDC, I _N ≤ 2.9 mA at 60 VDC
Voltage levels	Logic one: >8 VDC Logic zero: <5 VDC

^aExternal circuits connected to I/O connectors shall be SELV-rated circuits, galvanic isolated from mains.

I/O connection, Relay output^a	
Connect resistance	Maximum 30 Ω
Isolation to	All other ports
Connector	Detachable screw terminal
Conductor cross section (flexible)	0.08-1.5 mm ² (AWG 28-16). Use copper conductors only.
Stripping length cable	7 mm
Cable temperature rating	Minimum temperature rating of the cable to be connected to the field wiring terminals is +77 °C
Tightening torque, terminal screw	0.22-0.25 Nm
Terminal torque, screw flange	0.3 Nm
Circuit type	SELV
Type of switch	Solid state, DC general use, DC Pilot duty
Maximum withstand across open contacts	60 VDC (continuous)
Permissible current	80 mA (continuous), 120 mA (short term 1 s.)

^aExternal circuits connected to I/O connectors shall be SELV-rated circuits, galvanic isolated from mains.

Ethernet TX^a	
Electrical specification	IEEE std 802.3
Data rate	10 Mbit/s, 100 Mbit/s, 1 Gbit/s, manual or auto
Duplex	Full or half, manual or auto
Circuit type	SELV according to EN/IEC/UL 61010-2-201 PELV according to EN/IEC 60255-27 TNV-1 according to IEC 62151
Transmission range	Up to 100 m with CAT5e cable or better
Isolation	All other ports
Cabling	Shielded cable CAT5e or better is recommended
Conductive chassis	Yes

^a10/100/1 Gbit/s ports are:

RedFox-5728-F4G-T24G-HV, -HVHV: 5-28

RedFox-5728-F16G-T12G-HV, -HVHV: 7-10, 15-18, 23-26

SFP ports^a	
Optical/Electrical specification	IEEE std 802.3
Data rate	100 Mbit/s, 1 Gbit/s
Duplex	Full or half, manual or auto
Transmission range	Depending on transceiver
Connector	SFP slot holding fibre transceiver

^aSFP ports are:

RedFox-5728-F4G-T24G-HV, -HVHV: 1-4

RedFox-5728-F16G-T12G-HV, -HVHV: 1-6, 11-14, 19-22, 27-28

Console port	
Electrical specification	USB 2.0 device interface
Data rate	Up to 480 Mbps (high-speed mode)
Circuit type	PELV
Maximum supply current	100 mA
Connector	USB Micro B connector in device mode

Micro SD	
Electrical specification	Secure Digital 2.0
Maximum supply current	100 mA
Connector	Micro SD connector

5.2. Type Tests and Environmental Conditions

Environmental phenomena	Basic standard	Description	Test levels
ESD	EN 61000-4-2	Enclosure	Contact: ± 8 kV Air: ± 15 kV
Fast transients	EN 61000-4-4	AC power port DC power port Earth port	± 4 kV, direct coupling
		I/O port Ethernet ports	± 4 kV, capacitive coupling clamp
Surge	EN 61000-4-5	AC power port	± 4.0 kV L-E: $12 \Omega/9 \mu\text{F}$, 1.2/50 μs ± 2.0 kV L-L: $2 \Omega/18 \mu\text{F}$, 1.2/50 μs
		DC power port	
		I/O port	± 4.0 kV L-E: $42 \Omega/0.5 \mu\text{F}$, 1.2/50 μs ± 2.0 kV L-L: $42 \Omega/0.5 \mu\text{F}$, 1.2/50 μs
		Ethernet ports	± 4.0 kV L-E: 2Ω Direct on shield
Power frequency magnetic field	EN 61000-4-8	Enclosure	100 A/m, cont. 1000 A/m, 3 s
Pulsed magnetic field	EN 61000-4-9	Enclosure	300 A/m
Damped oscillatory magnetic field	EN 61000-4-10	Enclosure	300 A/m (peak)
Voltage dips and interruptions (AC port)	EN 61000-4-11	AC power port	70% U_T , 1 period 40% U_T , 50 periods 0% U_T , 5 periods 0% U_T , 50 periods
Conducted CM disturbances	EN 61000-4-16	AC power port DC power port I/O port Ethernet ports	30V to 3V, 15 to 150 Hz 3V, 150 Hz to 1.5 kHz 3V to 10V, 1.5 to 15 kHz 30V, 15 to 150 kHz
Mains frequency voltage		30V continuous, DC, 50 and 60 Hz, 300V for 1s	
Ripple on DC power supply	EN 61000-4-17	DC power port	10% of U_N , 100 Hz and 120 Hz
Damped oscillatory wave	EN 61000-4-18	AC power port DC power port	CM: ± 2.5 kV $200 \Omega/0.5 \mu\text{F}$, 1 MHz CM: ± 2.0 kV $50 \Omega/33 \text{ nF}$, 10 MHz DM: ± 2.5 kV $200 \Omega/0.5 \mu\text{F}$, 1 MHz
		I/O port	CM: ± 2.5 kV $200 \Omega/0.5 \mu\text{F}$, 1 MHz DM: ± 2.5 kV $200 \Omega/0.5 \mu\text{F}$, 1 MHz
		Ethernet ports	CM: ± 2.5 kV $200 \Omega/1 \mu\text{F}$, 1 MHz direct of shield
Voltage dips and interruptions (DC port)	EN 61000-4-29	DC power port	70% U_T , 100 ms 40% U_T , 100 ms 0% U_T , 50 ms

Environmental phenomena	Basic standard	Description	Test levels
Radiated RF immunity	EN 61000-4-3 IEEE Std C37.90.2	Enclosure	20 V/m, 80% AM (1 kHz) at 80 MHz to 2 GHz, Spot freq.: 80, 160, 380, 450, 900, 1600, 1850 MHz 10 V/m, 80% AM (1 kHz) at 2 to 6 GHz, Spot freq.: 2150, 3800 MHz 20 V/m, pulse keying (2 Hz) at 80 MHz to 1 GHz, Spot freq.: 1732, 1800 MHz 10 V/m, pulse keying (2 Hz), Spot freq.: 2310, 2450, 5800 MHz
Conducted RF immunity	EN 61000-4-6	AC power port	10 V 0.15 to 80 MHz, Spot freq.: 27, 68 MHz
		DC power port	
		I/O port	
		Ethernet ports	
		Earth port	
Radiated RF emission	CISPR 16-2-3	Enclosure	Class A (FCC Part 15B)
	ANSI 63.4		
Conducted RF emission	CISPR 16-2-1	Power ports	Class A (FCC Part 15B)
	ANSI 63.4		
	CISPR 22	Ethernet ports	Class A
Dielectric strength	IEC 60255-27	Power port (AC) to all other ports	2000 VAC rms, 60 s
		Power port (DC) to all other ports	
		I/O port to all other ports	
	IEEE 802.3	Ethernet ports to all other ports	1500 VAC rms, 60 s
Impulse withstand	IEC 60255-27	Power port (AC)	5 kV
		Power port (DC)	
		I/O port	
		Ethernet ports	1 kV

Table 8. EMC and electrical conditions

Environmental phenomena	Basic standard	Description	Test levels
Temperatures	EN 60068-2-1 EN 60068-2-2 EN 60068-2-14	Operational	-40 to +70°C (-40 to +158°F)
		Storage and transport	-50 to +85°C (-58 to +185°F)
Humidity	EN 680068-2-30 EN 60068-2-78	Operational	5-95% relative humidity
		Storage and transport	
Altitude		Operational	2000 m/70 kPa
Service life		Operational	10 years
MTBF hours	MIL-HDBK 217F		RedFox-5728-(E-)F4G-T24G-HV: 316,000 RedFox-5728-(E-)F4G-T24G-HVHV: 269,000 RedFox-5728-(E-)F16G-T12G-HV: 353,000 RedFox-5728-(E-)F16G-T12G-HVHV: 295,000
	Telcordia		RedFox-5728-(E-)F4G-T24G-HV: 678,000 RedFox-5728-(E-)F4G-T24G-HVHV: 549,000 RedFox-5728-(E-)F16G-T12G-HV: 710,000 RedFox-5728-(E-)F16G-T12G-HVHV: 570,000
Vibration	IEC 60255-21-1	Operational	Class 2, 10 to 60 Hz at ± 0.075 mm, 60 to 150 Hz at 1g 1 sweep cycle in each axis, 1 octave/min.
		Non-operational, endurance test	Class 2, 10 to 150 Hz at 2g 20 sweep cycles in each axis, 1 octave/min.
	IEC 60255-21-3, method A	Operational, seismic test	Class 2 Horizontal: 1 to 8 Hz at ± 7.5 mm, 8 to 35 Hz at 2g Vertical: 1 to 8 Hz at 3.5 mm, 8 to 35 Hz at 1g 1 sweep cycle in each axis (3x5), 1 octave/min
			5 to 8 Hz at ± 7.5 mm 8 to 500 Hz at 2g 5 sweep cycles in each axis (3x5), 1 octave/min
	EN 60068-3-3		5 to 8 Hz at ± 7.5 mm 8 to 500 Hz at 2g 5 sweep cycles in each axis (3x5), 1 octave/min
	EN 60068-2-64	Operational	2.3 m/s ² random, 5 to 2000 Hz, 3x1.5h
IEEE 1613	Operational	Class V.S.3 1 to 150 Hz at <30 mm/s	
Shock	IEC 60255-21-2	Operational	Class 2, 10g/11 ms, 3x6 shocks
		Non-operational	Class 2, 30g/11 ms, 3x6 shocks
Bump			Class 2, 20g/16 ms, 6x1000 bumps
Fall	IEEE 1613	Non-operational	Height of fall = 100 mm

Environmental phenomena	Basic standard	Description	Test levels
Device Reliability Class	IEC 61850-3		Class 2: Error free, uninterrupted communication
	IEEE 1613		
Enclosure	EN 61010-1	Aluminum	Fire enclosure
Weight			3.8 kg
Degree of protection	EN 60529	Enclosure	RedFox-5728-(E-)F16G variants: IP30 RedFox-5728-(E-)F4G variants: IP40
Cooling			Convection
Pollution degree	EN/IEC 61010-1		PD2 Macro and Micro Environment
Overvoltage category	EN/IEC 61010-1		OVC III
Insulation class	EN/IEC 61010-1		Class I equipment
Location	EN/IEC 61010-1		Indoor use

Table 9. Environmental and mechanical conditions

6. Revision Notes

Revision	Date	Change description
Rev. B	2021-04	Product illustrations updated, 1.5 WeOS updated, 2.5.3 Simplified Declaration of Conformity updated, 3.4.3 Console port updated, 3.6 Dimensions updated, 5.1 Interface Specifications, Ethernet TX table updated, Console table updated, 5.2 Type Tests and Environmental Conditions updated
Rev. A	2020-11	First version of the user guide

WESTERMO

Westermo • Metallverksgatan 6, SE-721 30 Västerås, Sweden

Tel +46 16 42 80 00 Fax +46 16 42 80 01

E-mail: info@westermo.com

www.westermo.com